

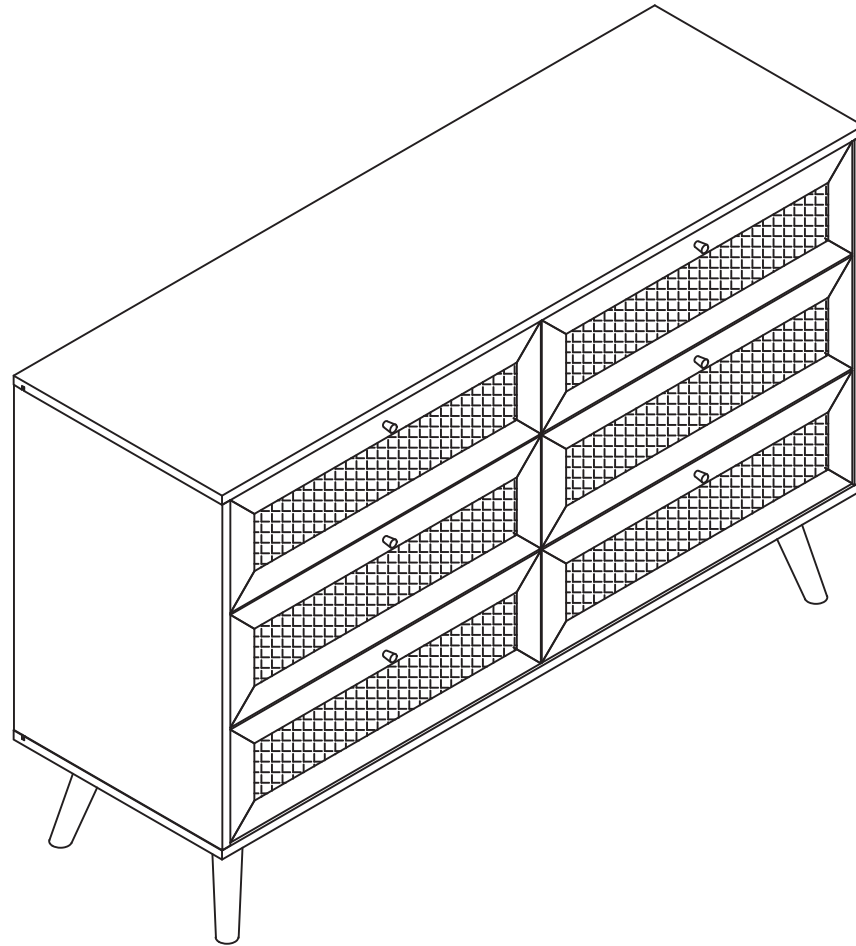
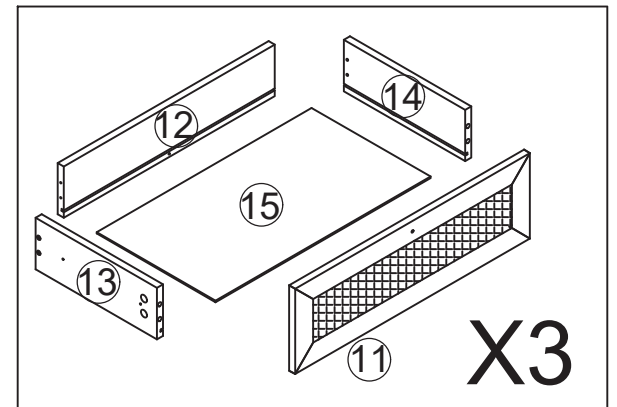
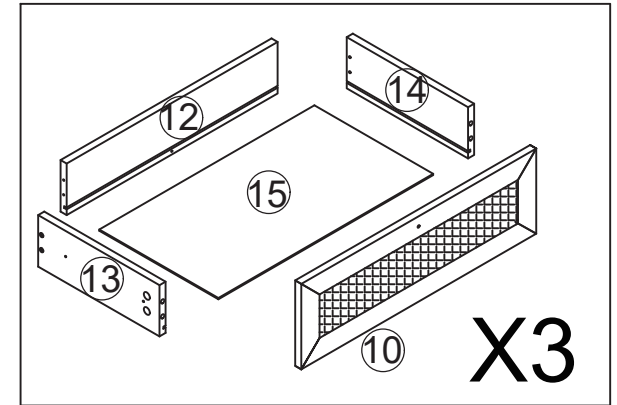
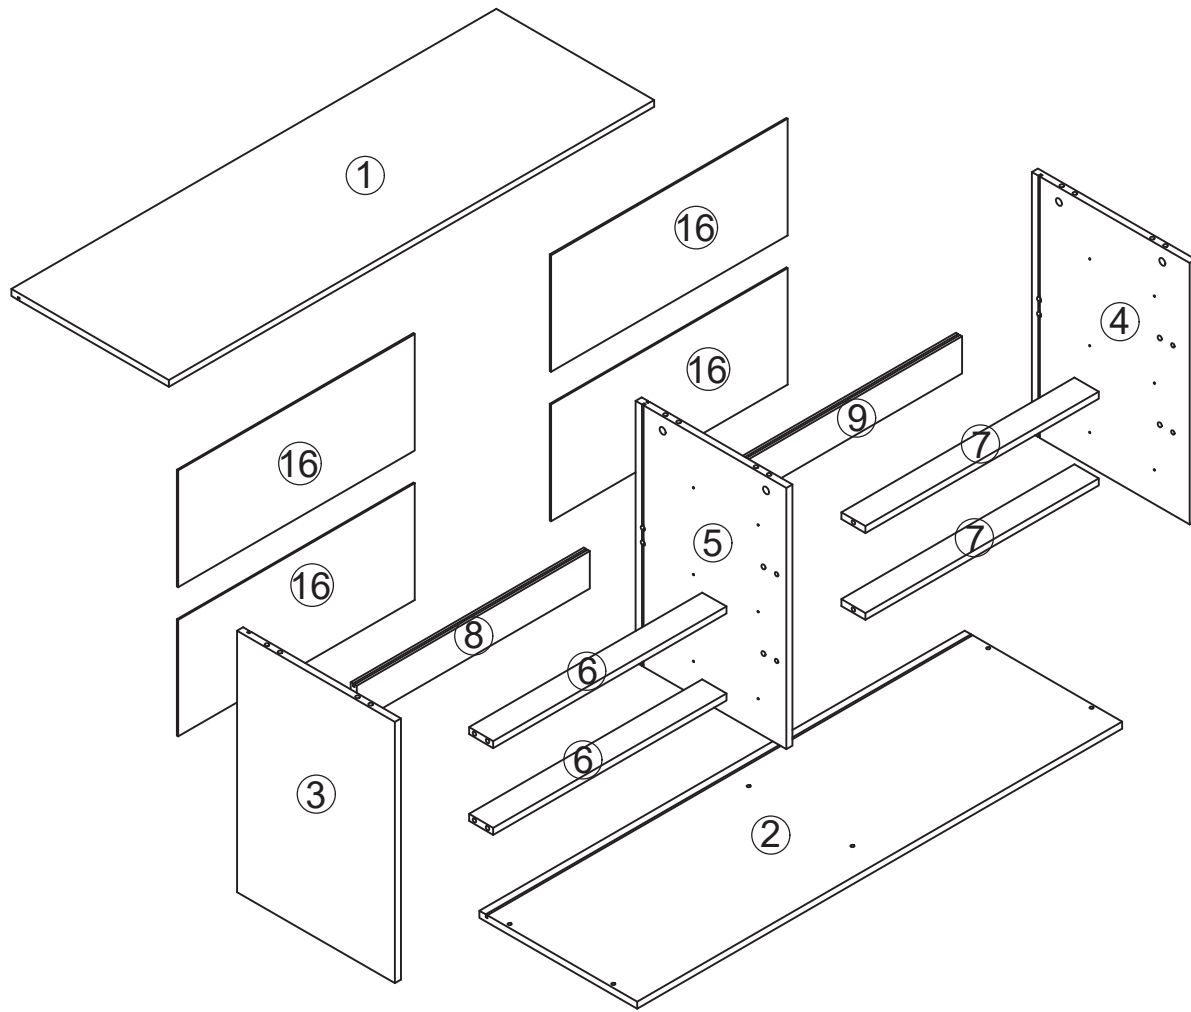
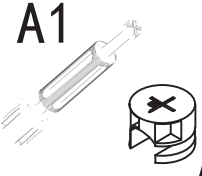
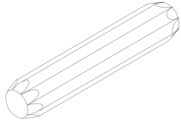
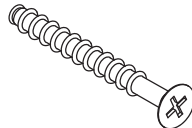

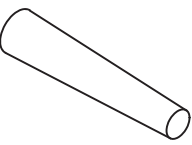
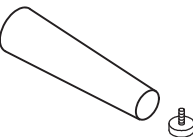
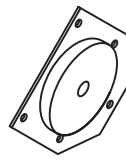
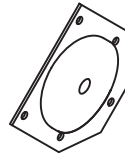
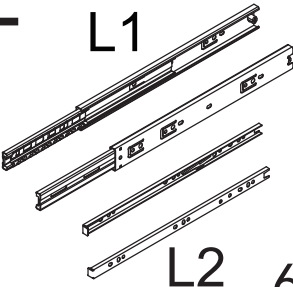





Assembly Instructions

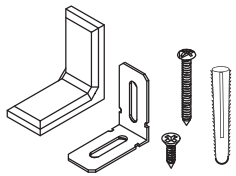


Assembly Instructions

A  45PCS	B 8*40  12PCS	C 7*50  6PCS	D 3.5*14  85PCS	E 3.5*35  24PCS
F 170mm  4PCS	G 165mm  1PCS	H  4PCS	I  1PCS	J  6PCS
K 4*20  6PCS	L 300mm  L1 L2 6PCS	M 284mm  6PCS	N  16PCS	O  2PCS

Assembly Instructions

1

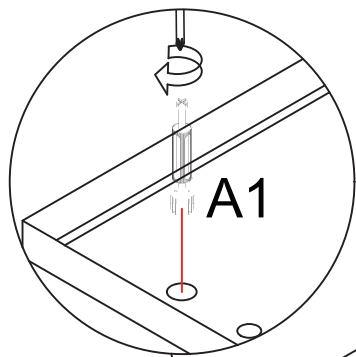

A1

1

4

10

X3

11

X3

3

5

5


180°







A1*45

Assembly Instructions

2

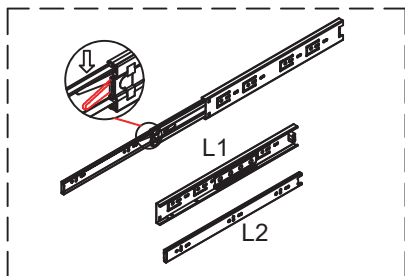

The guide rail is undivided into left and right sides.

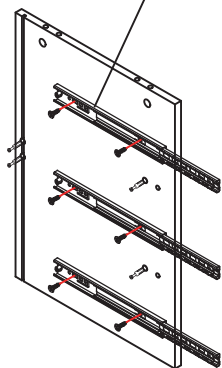
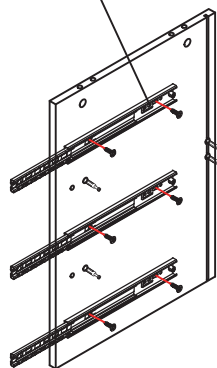
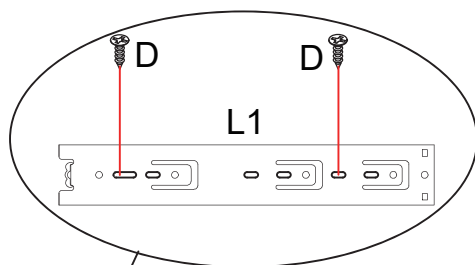
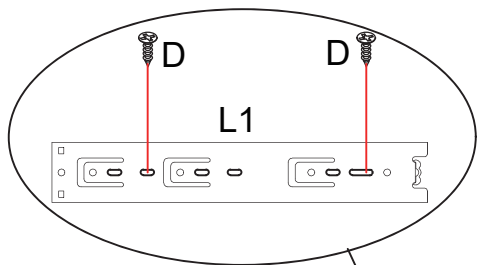


D*12



L1*3

3

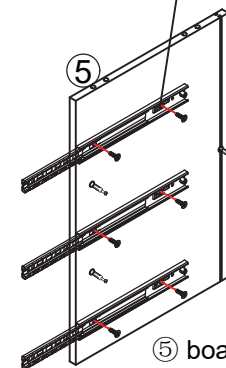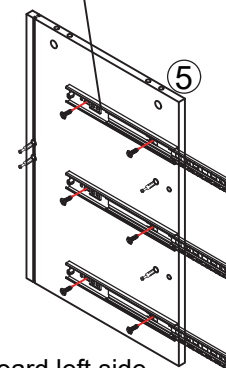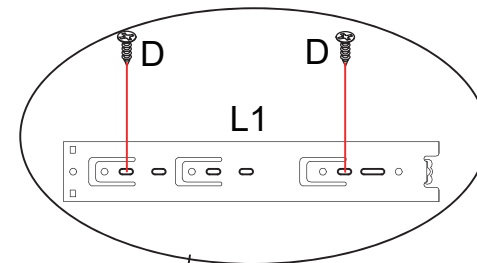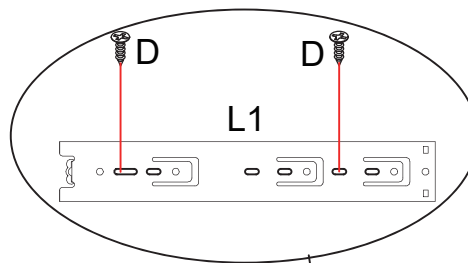

5 board left side

5 board right side



D*12





L1*3



Assembly Instructions

4

Make sure the arrow on the screw align to the hole on the side.

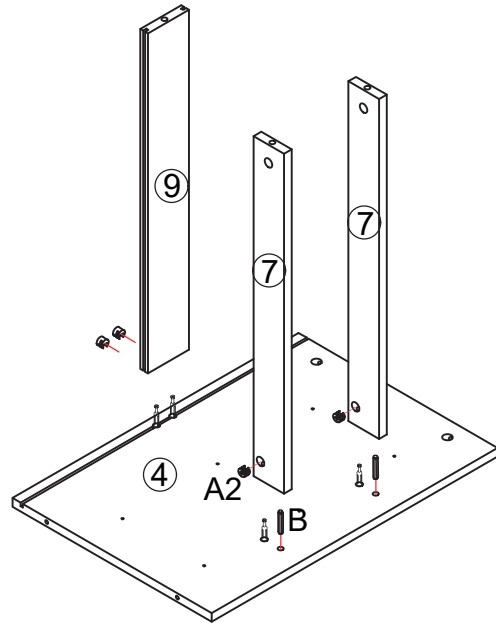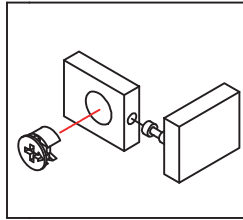

5

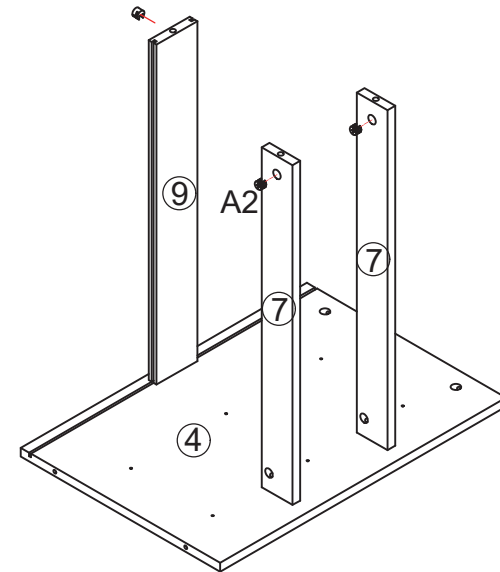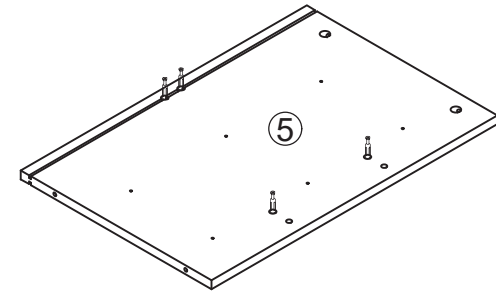

A2*4




B*2




A2*3

Assembly Instructions

6

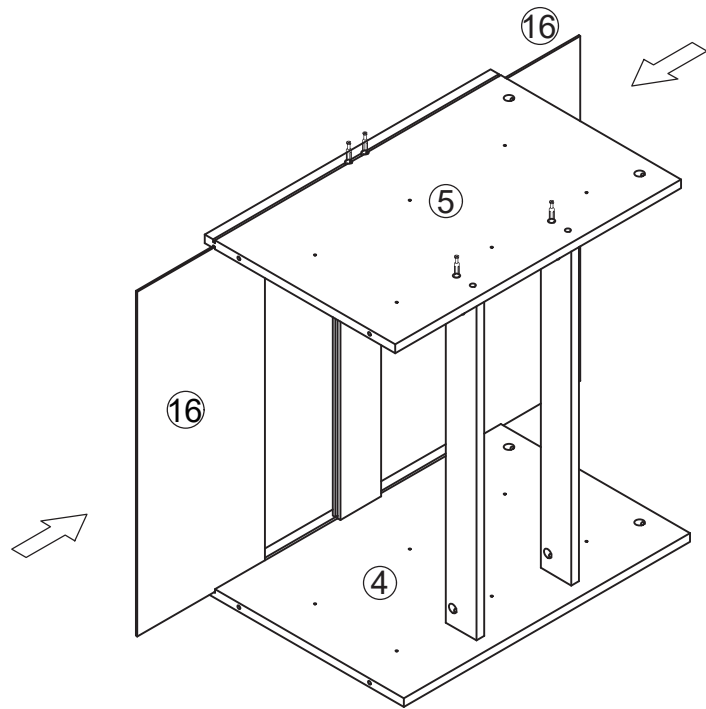

7

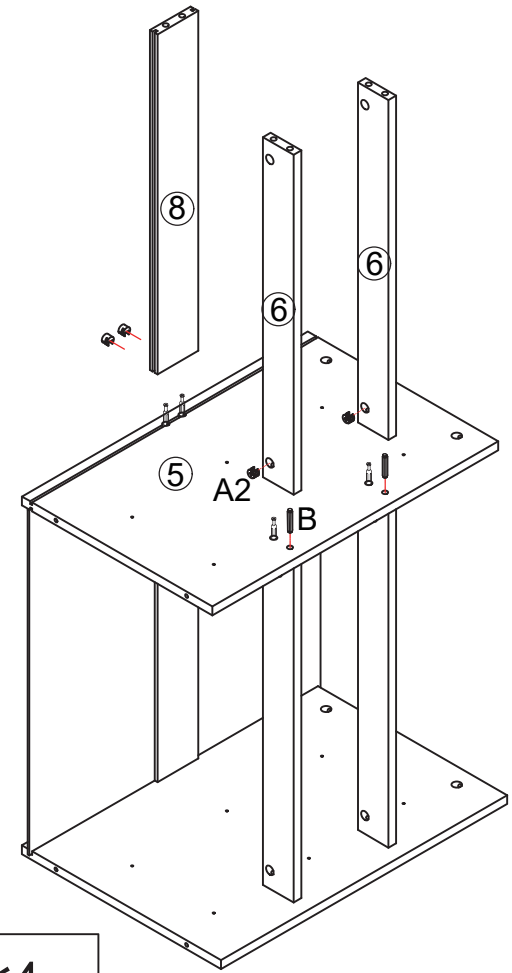


A2*4




B*2

Assembly Instructions

8

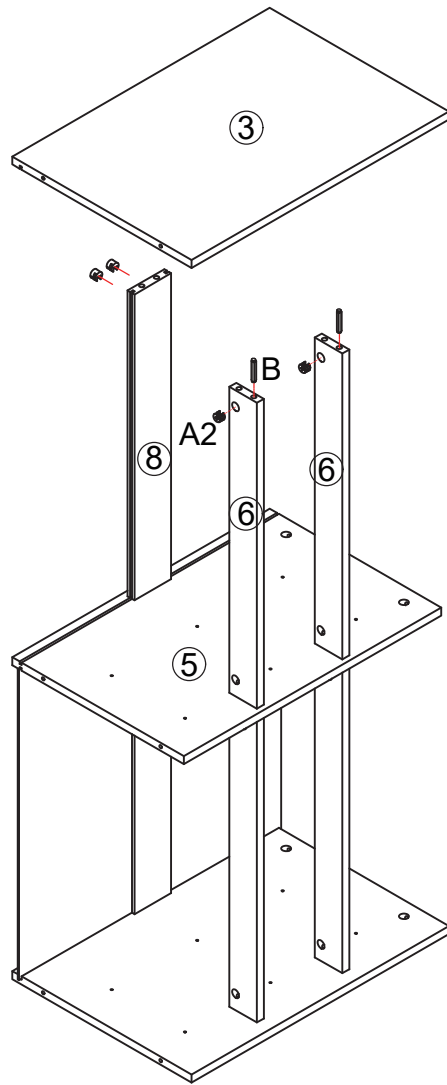

9

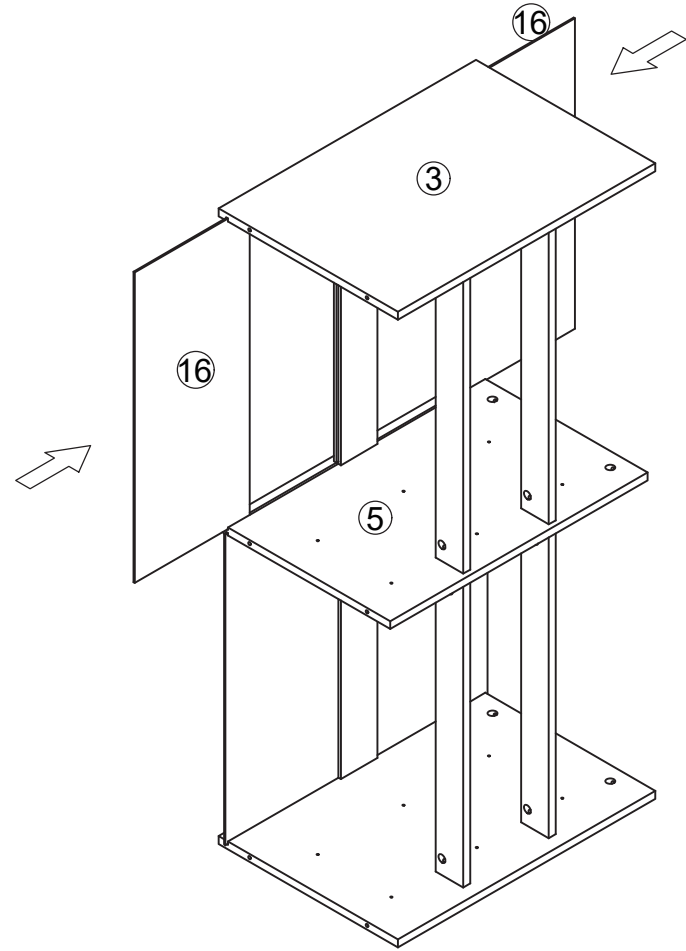



A2*4



B*2


Assembly Instructions

10

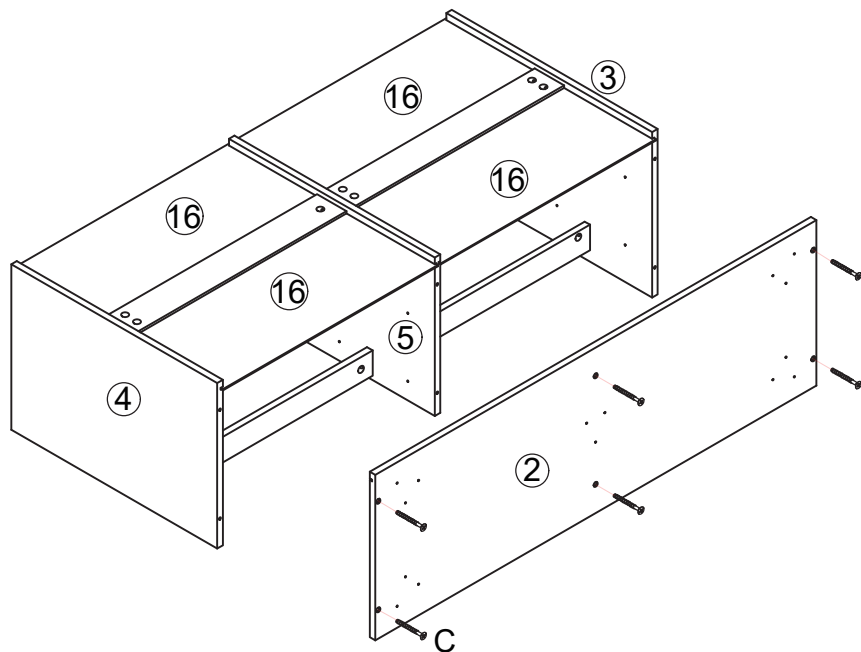

C*6


11

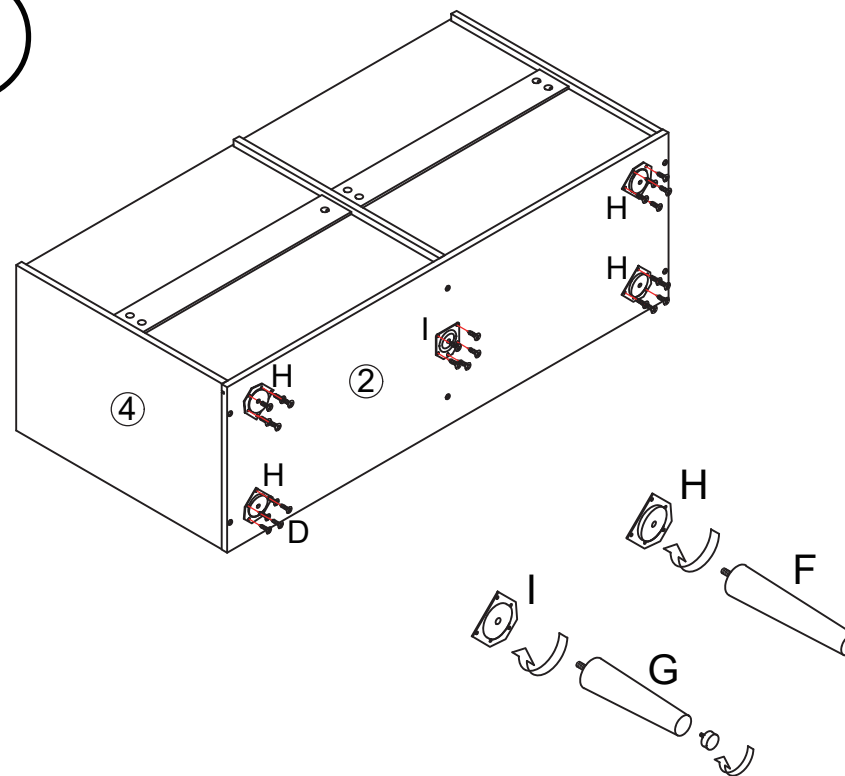

D*25



F*4



G*1




H*4



I*1



Assembly Instructions


12

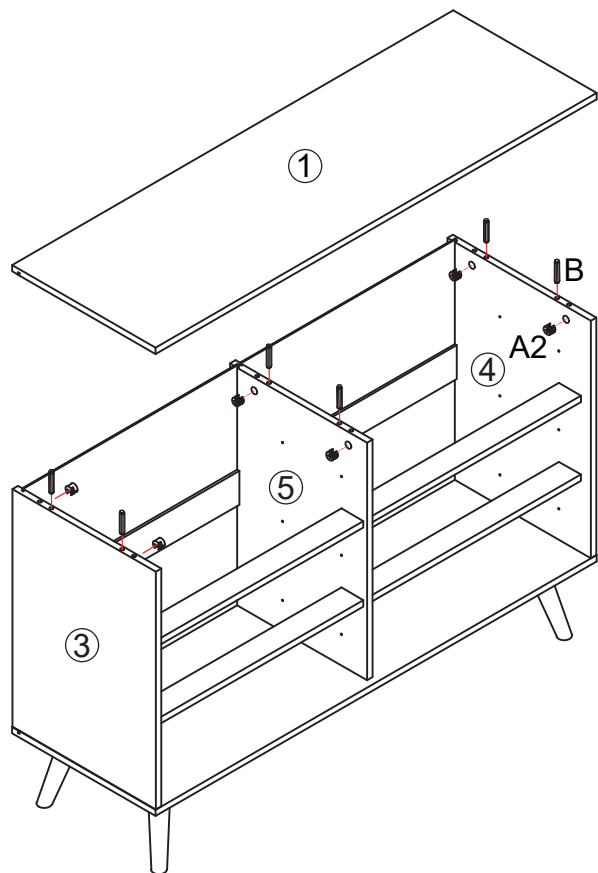

13

X6

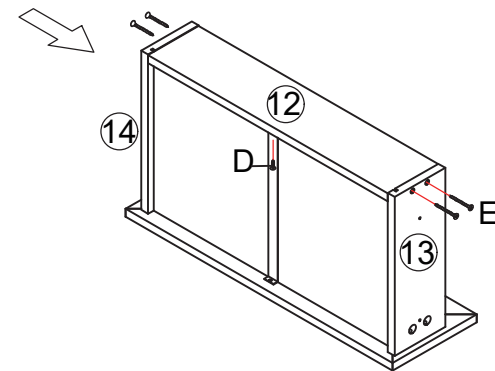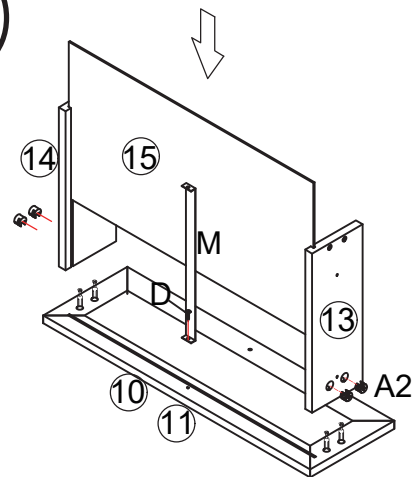


	A2*24
	E*24
	D*12
	M*6


Assembly Instructions

14

X6

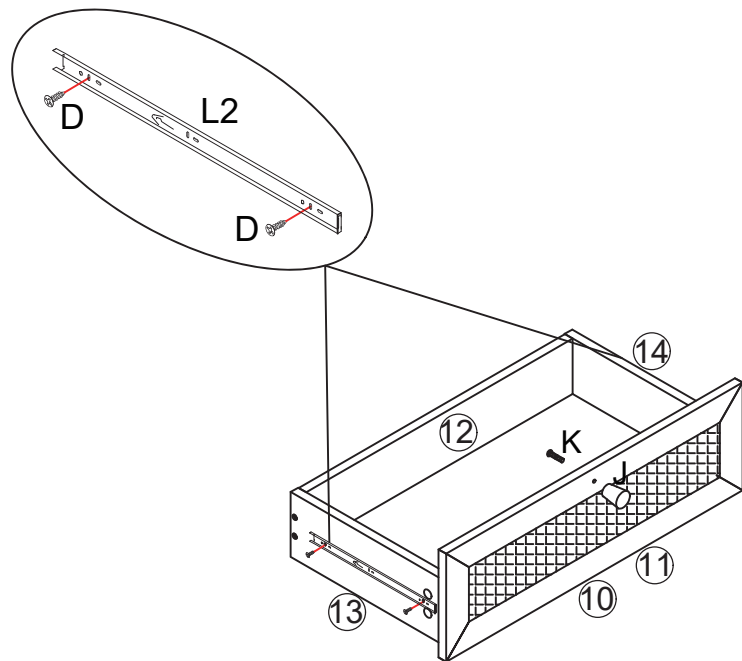

15

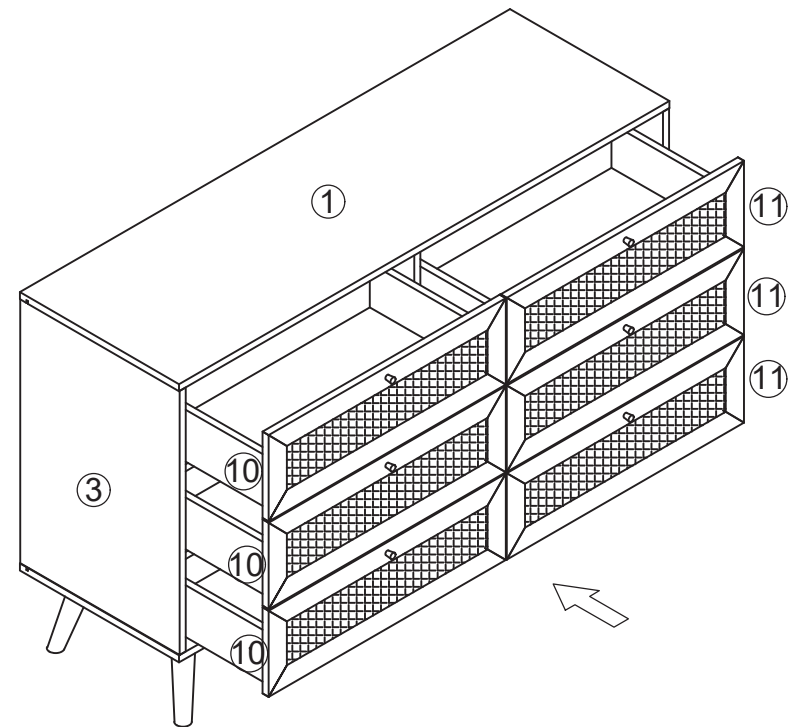

D*24



J*6




L2*6



K*6


Assembly Instructions

16




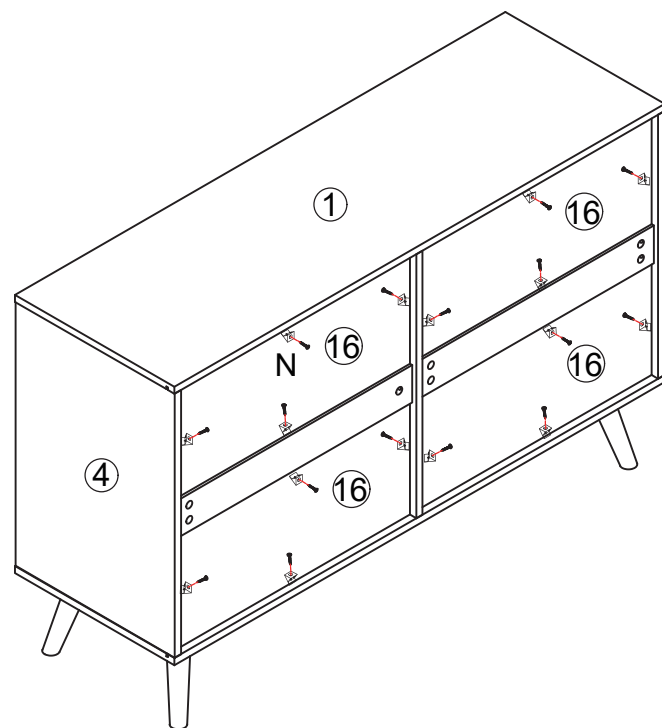


N*16

17

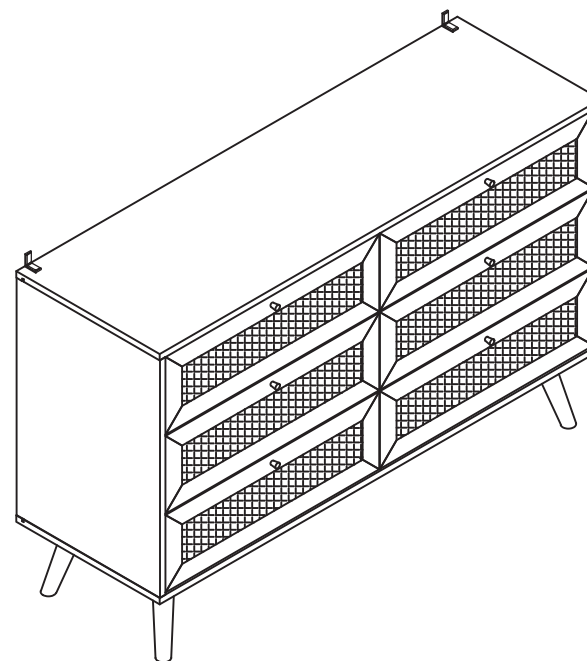

0*2

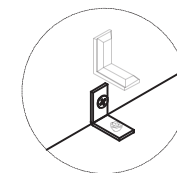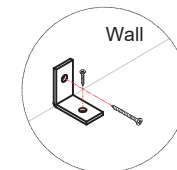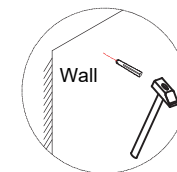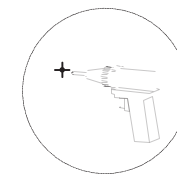

Please install tip-proof fitting.

Assembly Instructions