

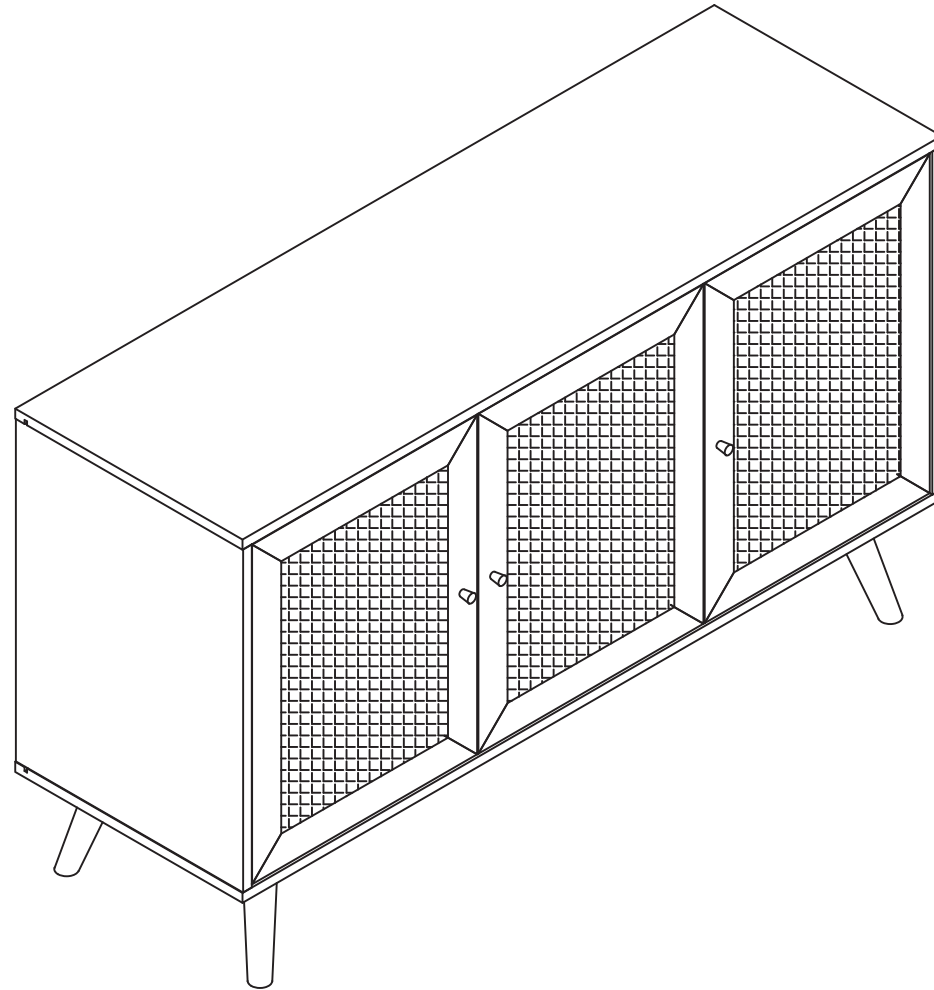
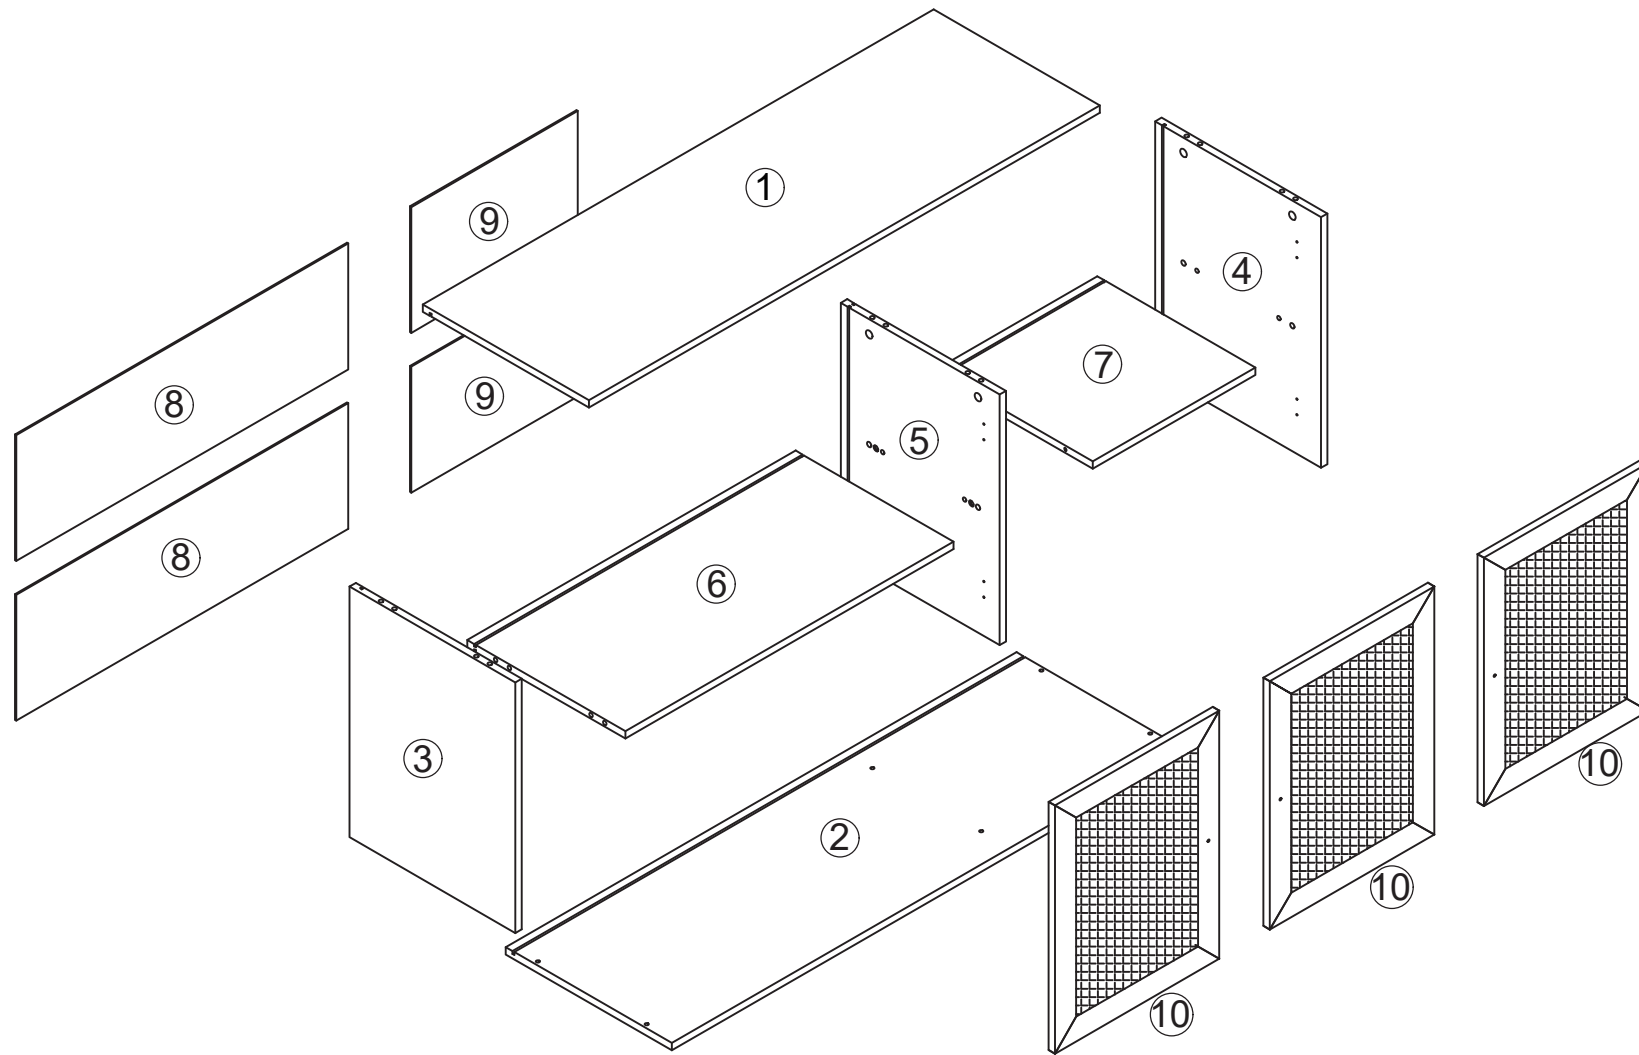
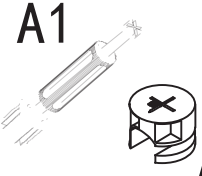
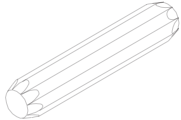
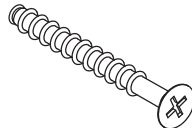

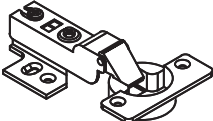
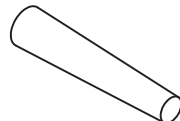
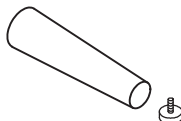
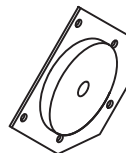
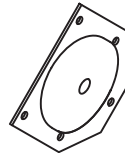


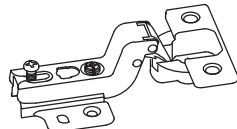

Assembly Instructions



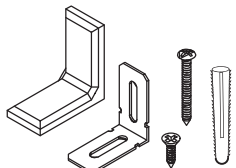


Assembly Instructions

A  12PCS	B 8*40  12PCS	C 7*50  8PCS	D 3.5*14  61PCS	E  2PCS
F 160mm  4PCS	G 155mm  1PCS	H  4PCS	I  1PCS	J  3PCS
K 4*20  3PCS	L  4PCS	M  10PCS	N 3*12  10PCS	O  2PCS

Assembly Instructions

1

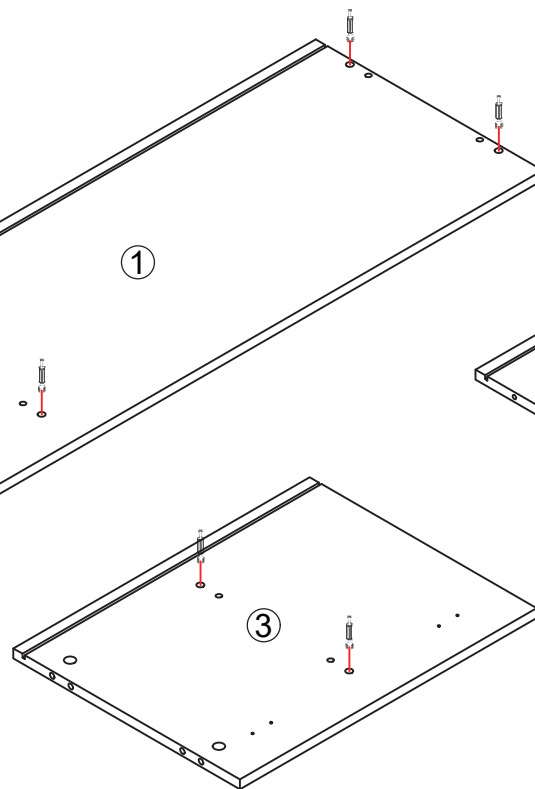
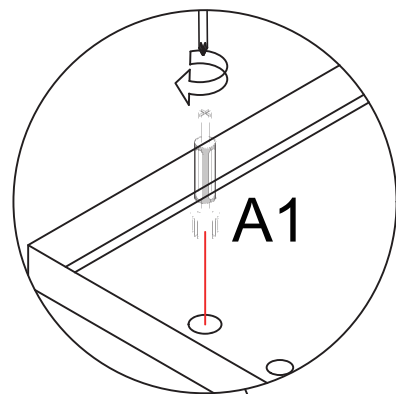


A1*12


Assembly Instructions

2

Make sure the arrow on the screw align to the hole on the side.

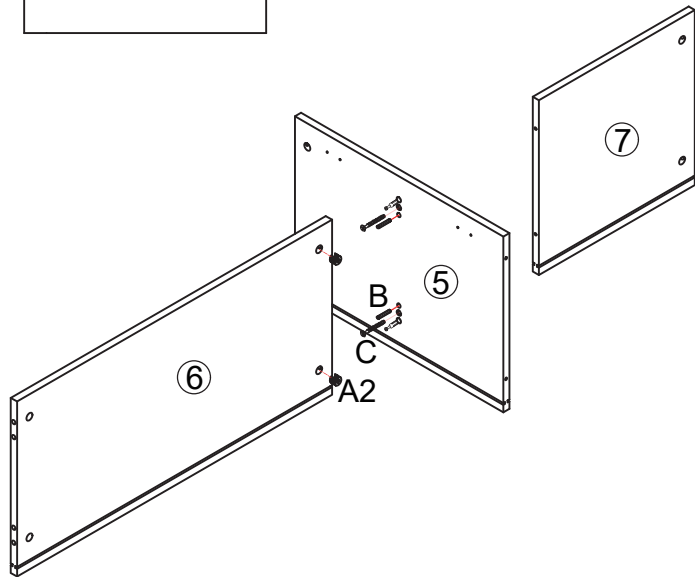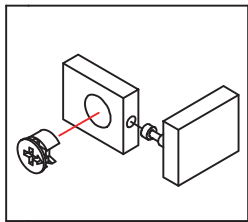

3

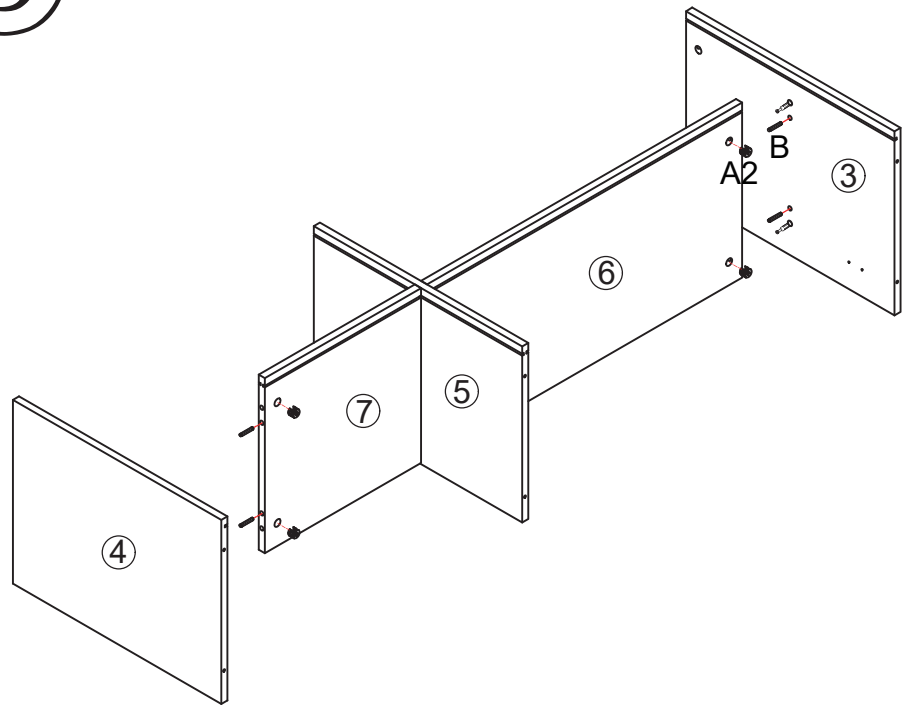

A2*2




B*2



C*2




A2*4




B*4

Assembly Instructions

④

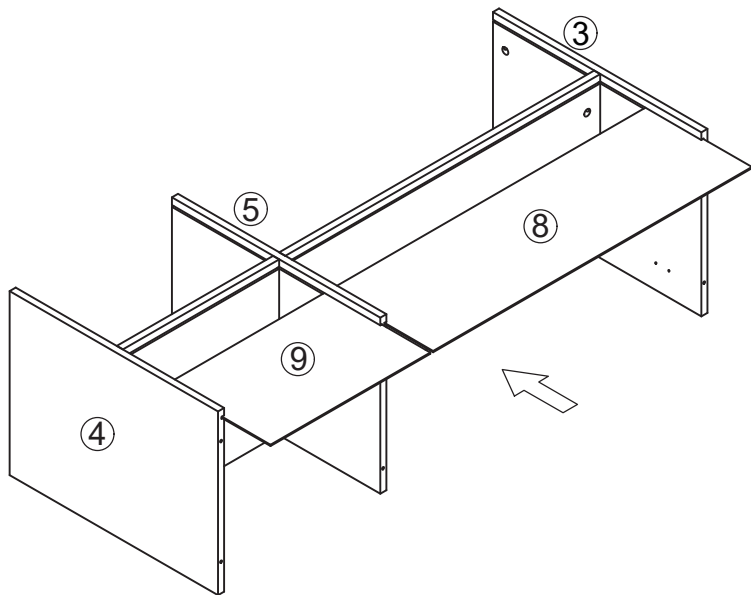


⑤

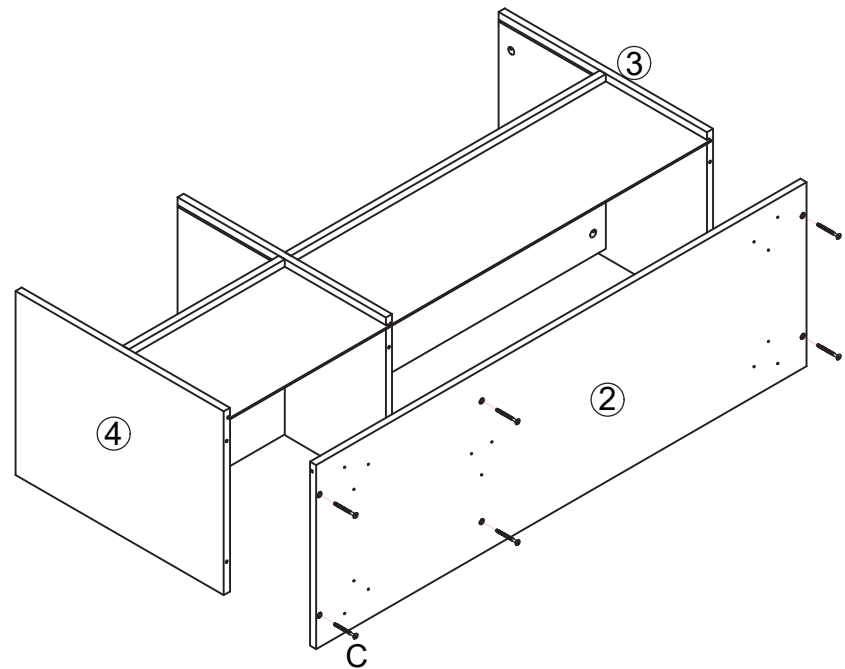


C*6

Assembly Instructions

6

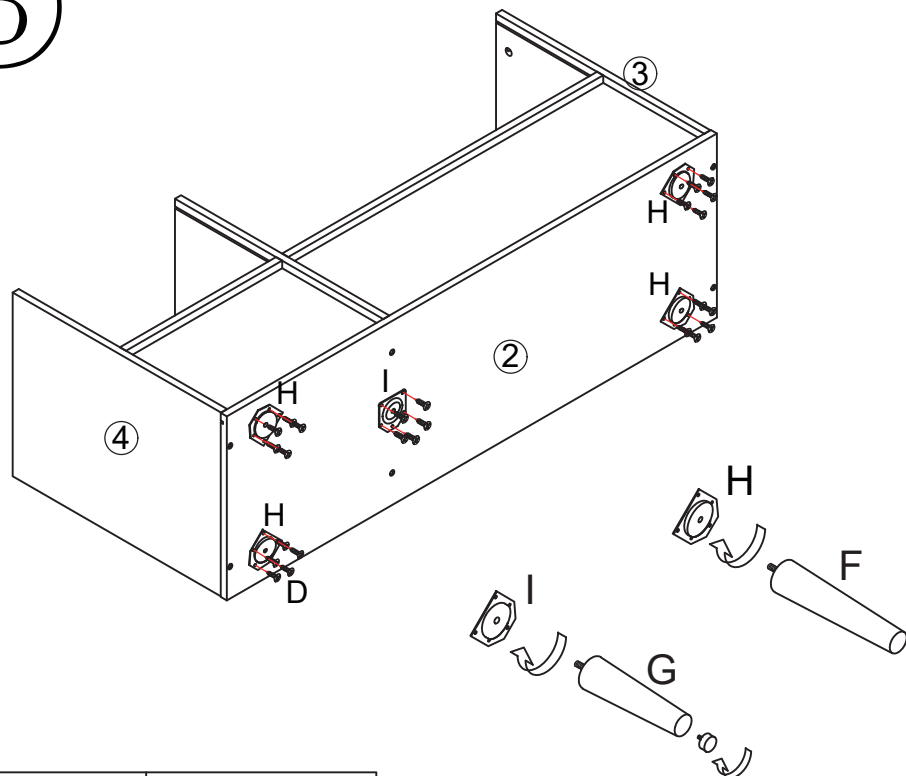

7

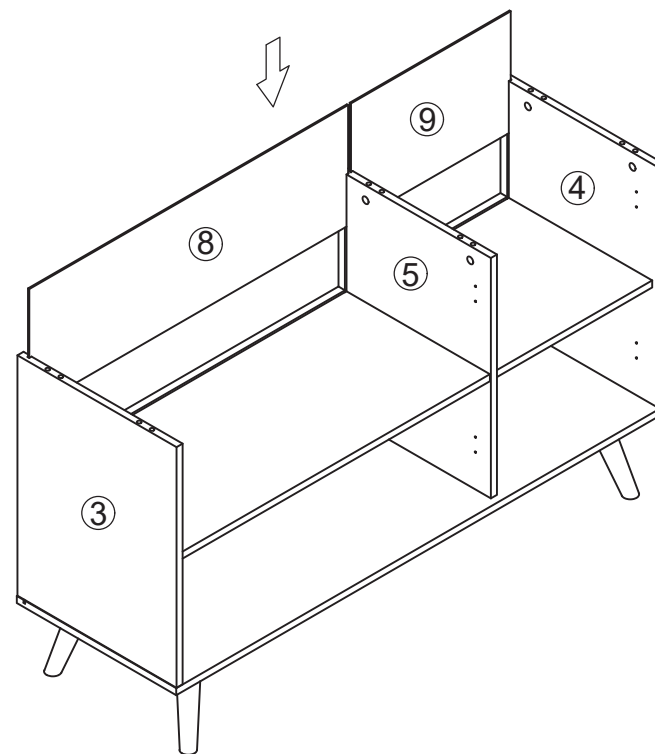


D*25



F*4



H*4




G*1



I*1


Assembly Instructions

8

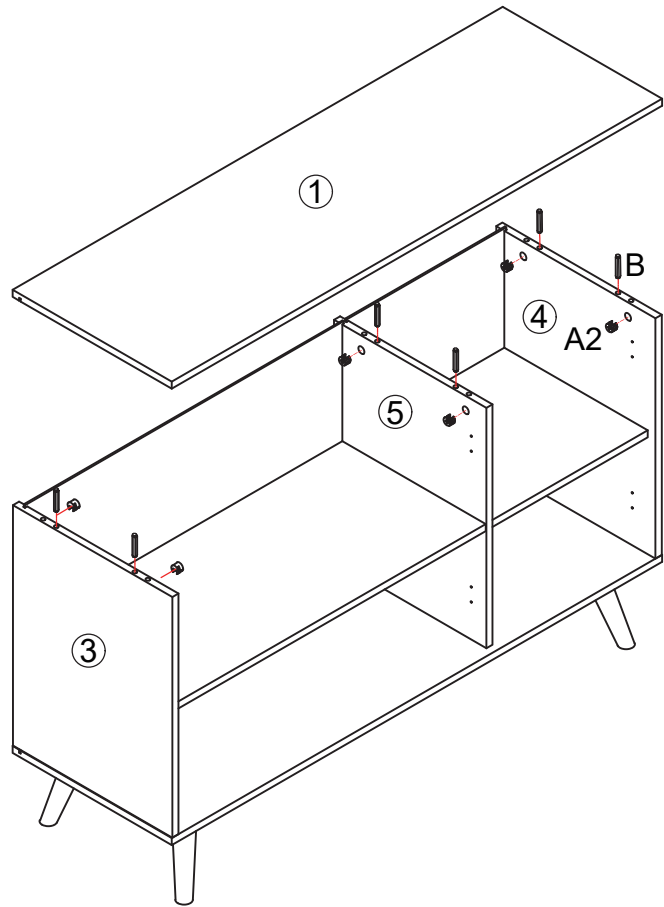

	A2*6
	B*6


9

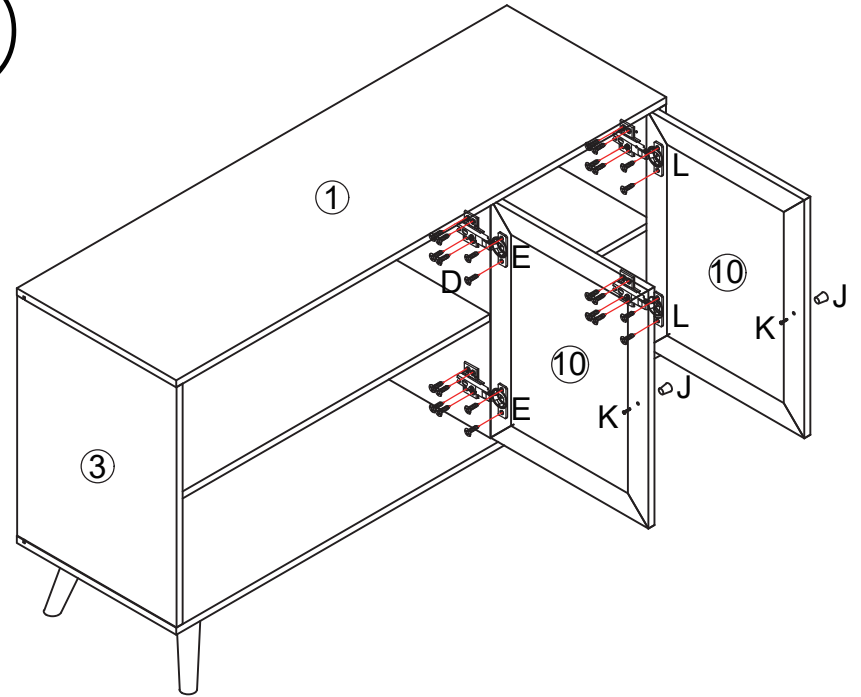

	D*24		
	E*2		J*2
	L*2		K*2


Assembly Instructions

10

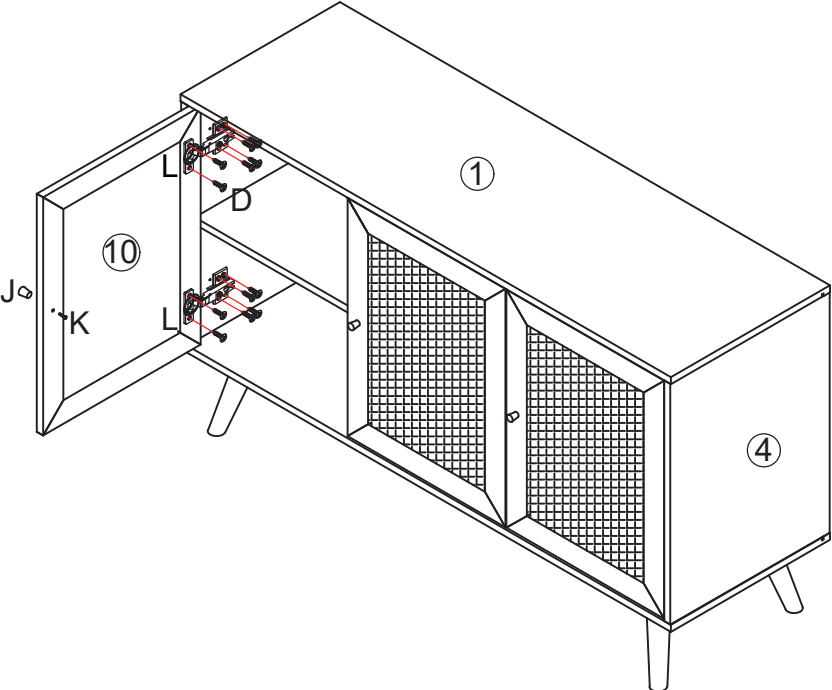

	D*12		J*1
	L*2		K*1






11

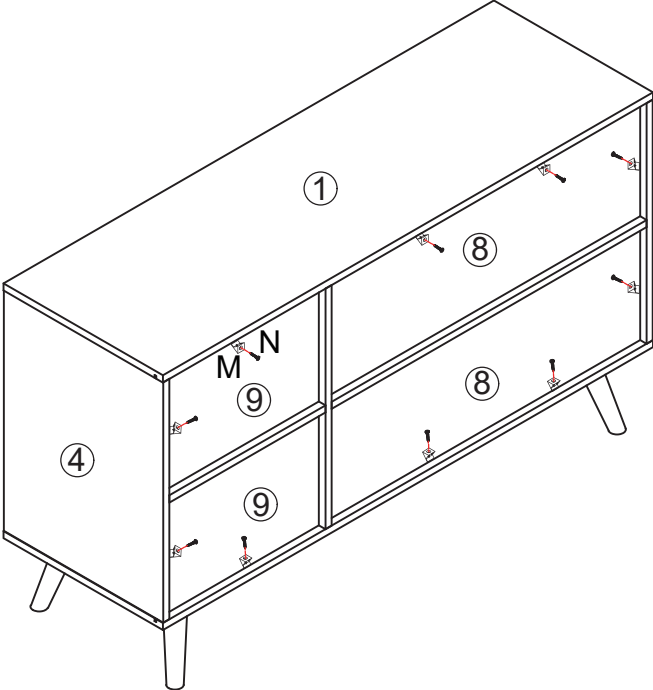

	M*10
	N*10

Assembly Instructions

12

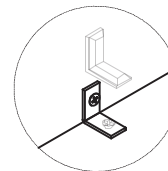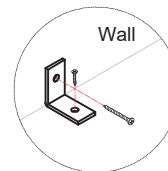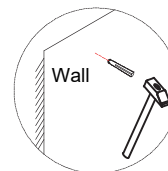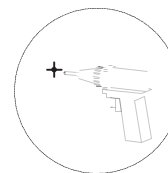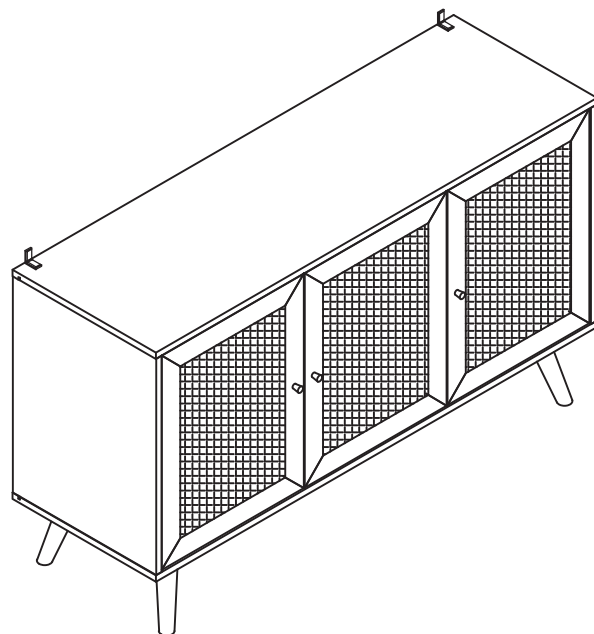

Please install tip-proof fitting.



0*2

Assembly Instructions