

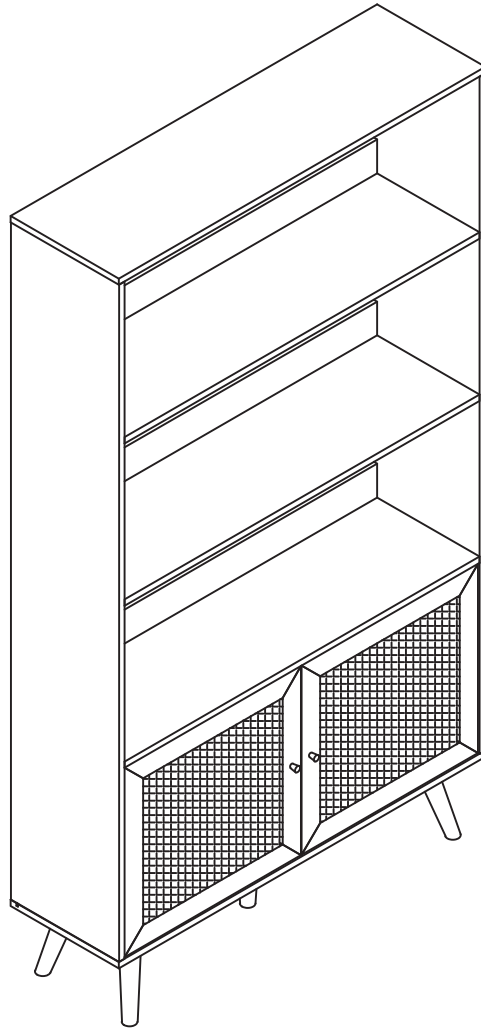
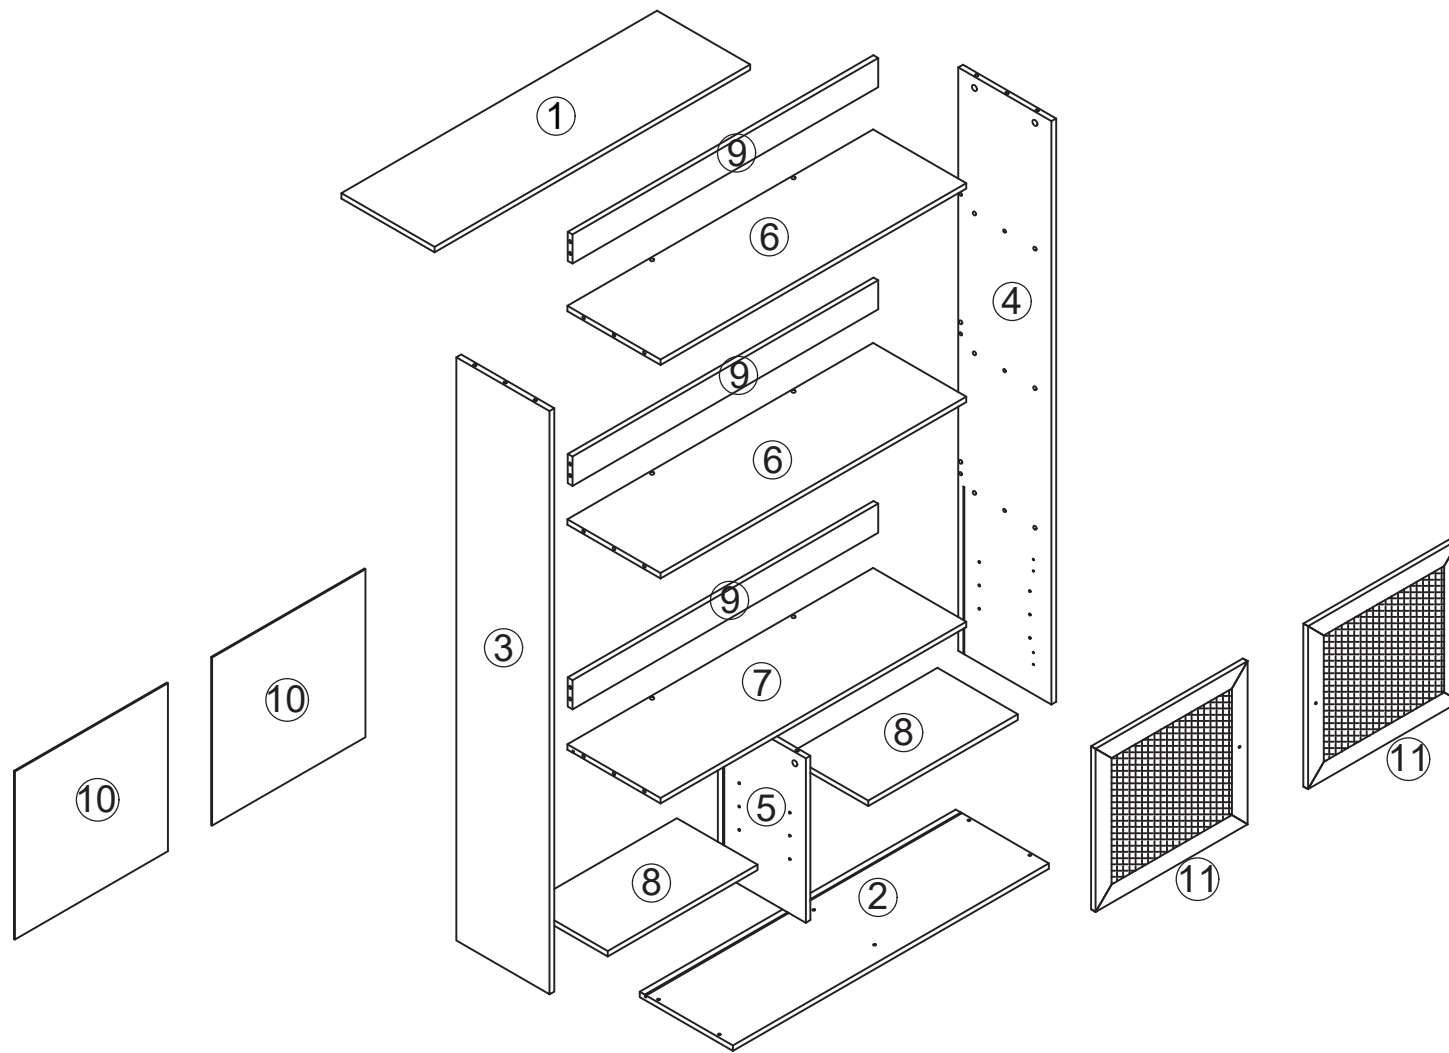
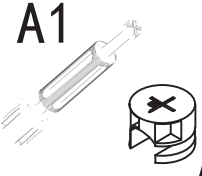
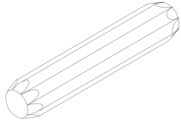
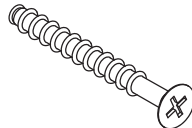


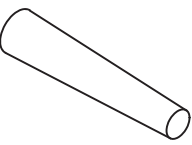
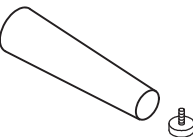




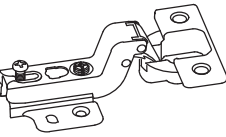

Assembly Instructions


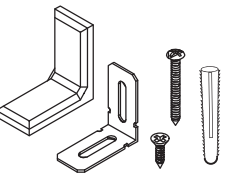


Assembly Instructions

A  30PCS	B 8*40  15PCS	C 7*50  6PCS	D 3.5*14  49PCS	E  8PCS
F 170mm  4PCS	G 165mm  1PCS	H  4PCS	I  1PCS	J  2PCS
K 4*20  2PCS	L  4PCS	M  8PCS	N 3*12  8PCS	O  2PCS

Assembly Instructions

1


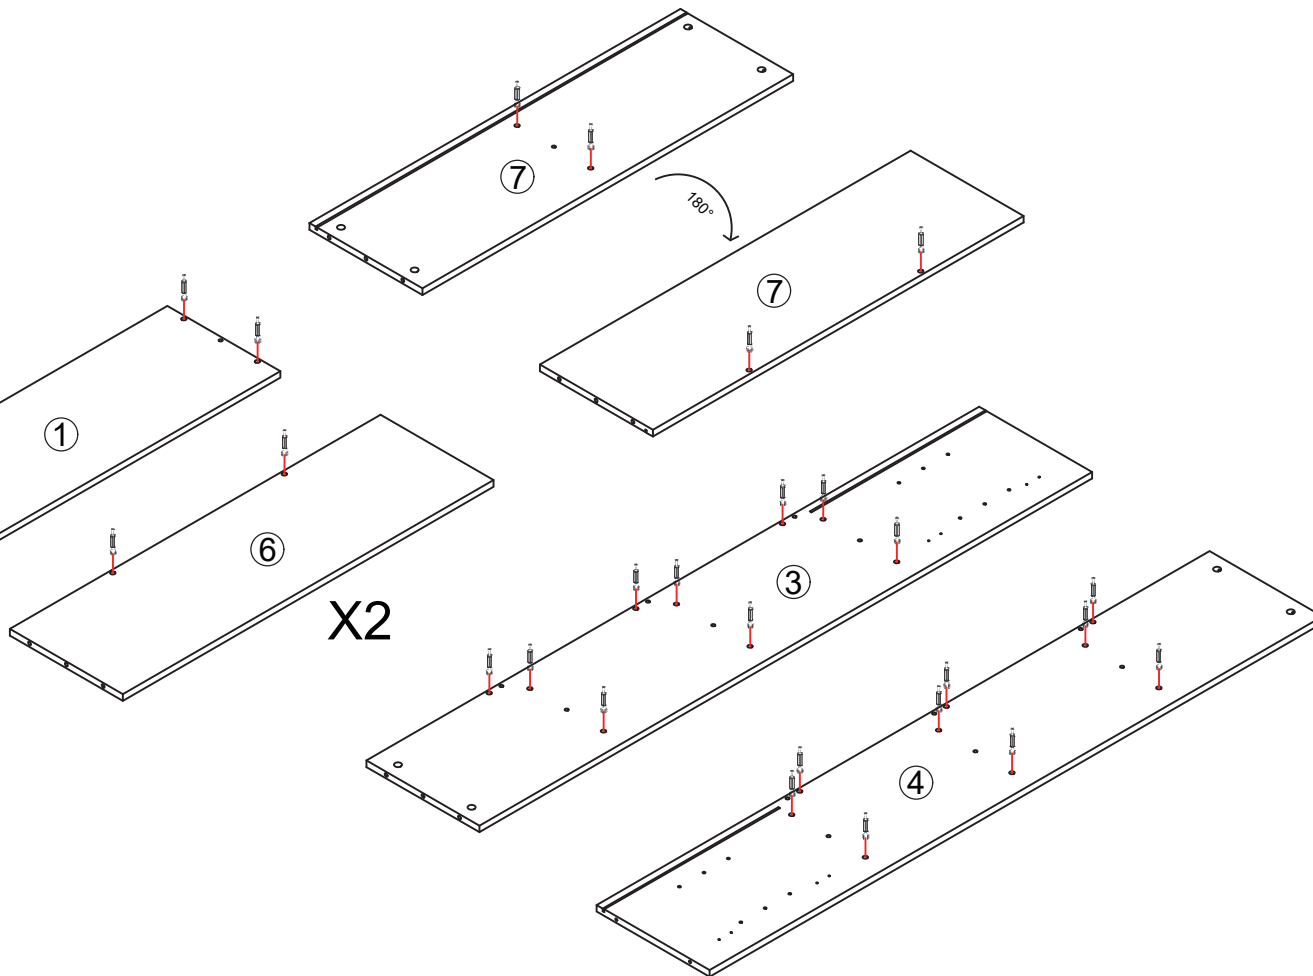
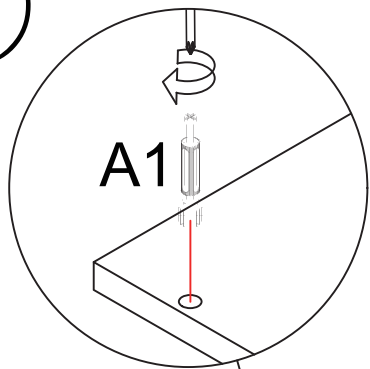


A1*30

Assembly Instructions


2

Make sure the arrow on the screw align to the hole on the side.

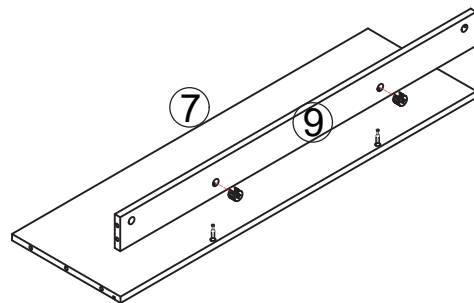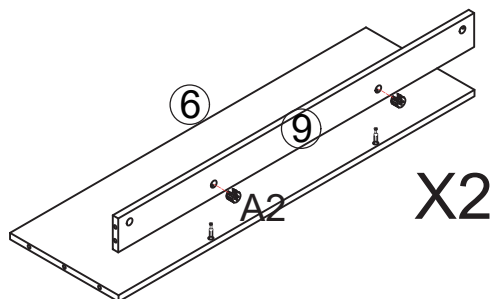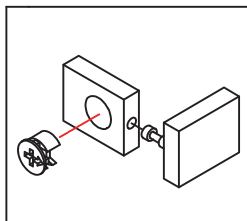

A2*6

3

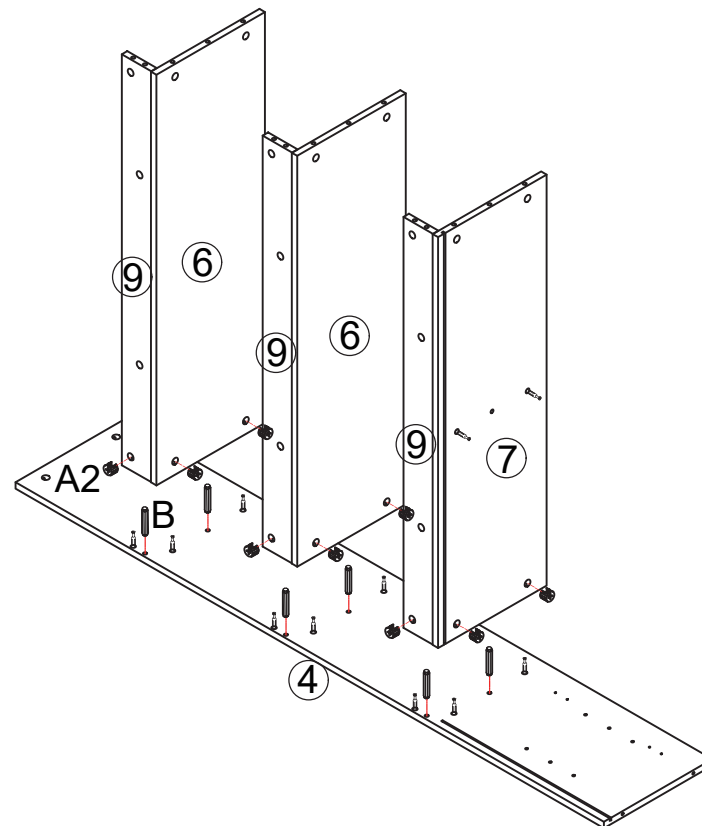


A2*9




B*6

Assembly Instructions

4

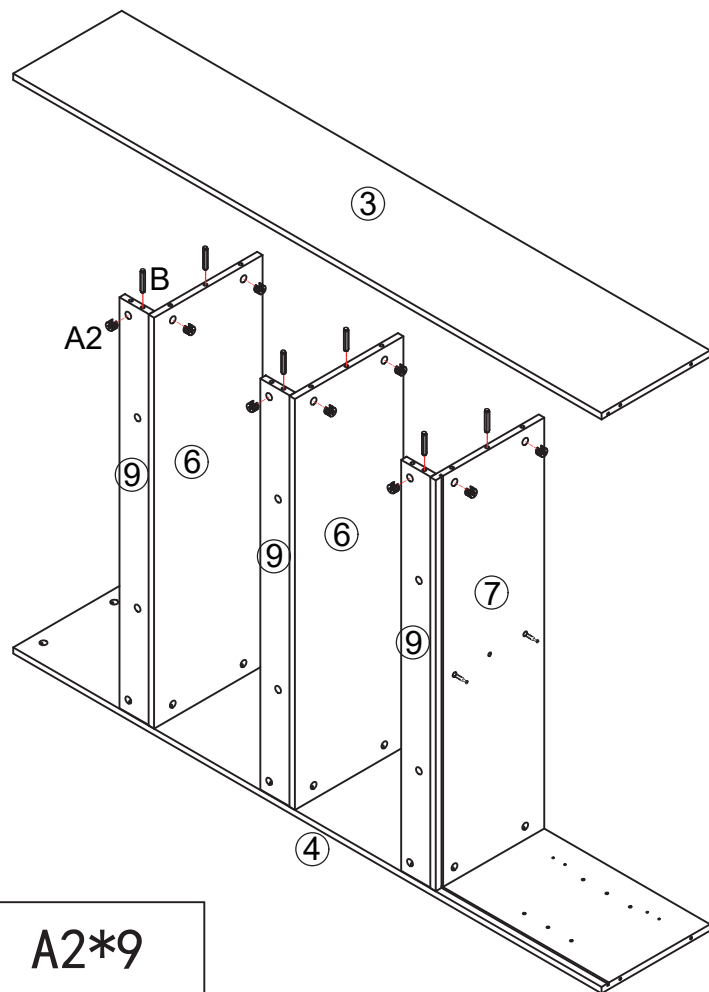

5

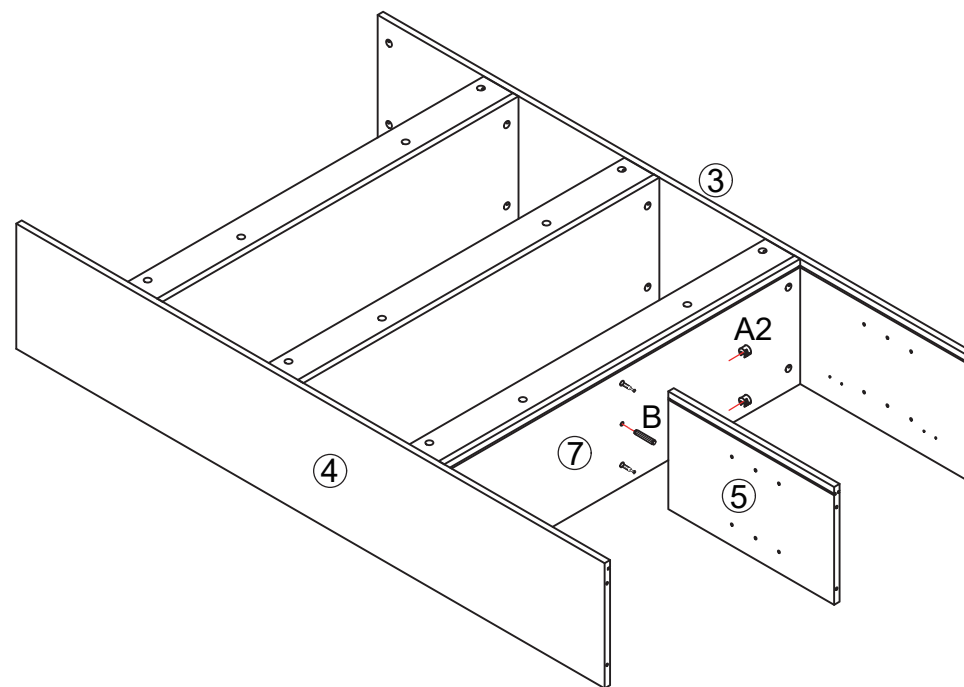


A2*9



B*6




A2*2




B*1

Assembly Instructions

⑥

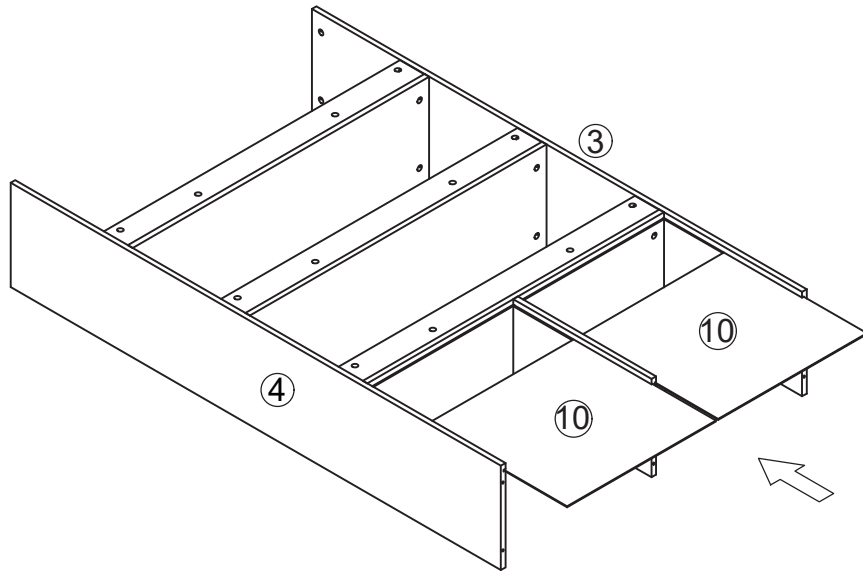


⑦

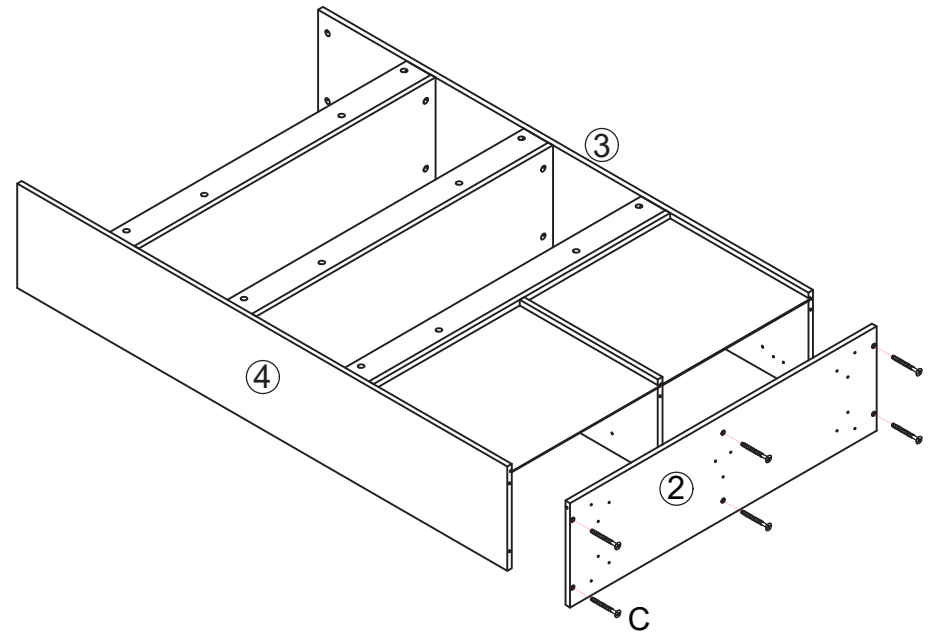


C*6


Assembly Instructions

8

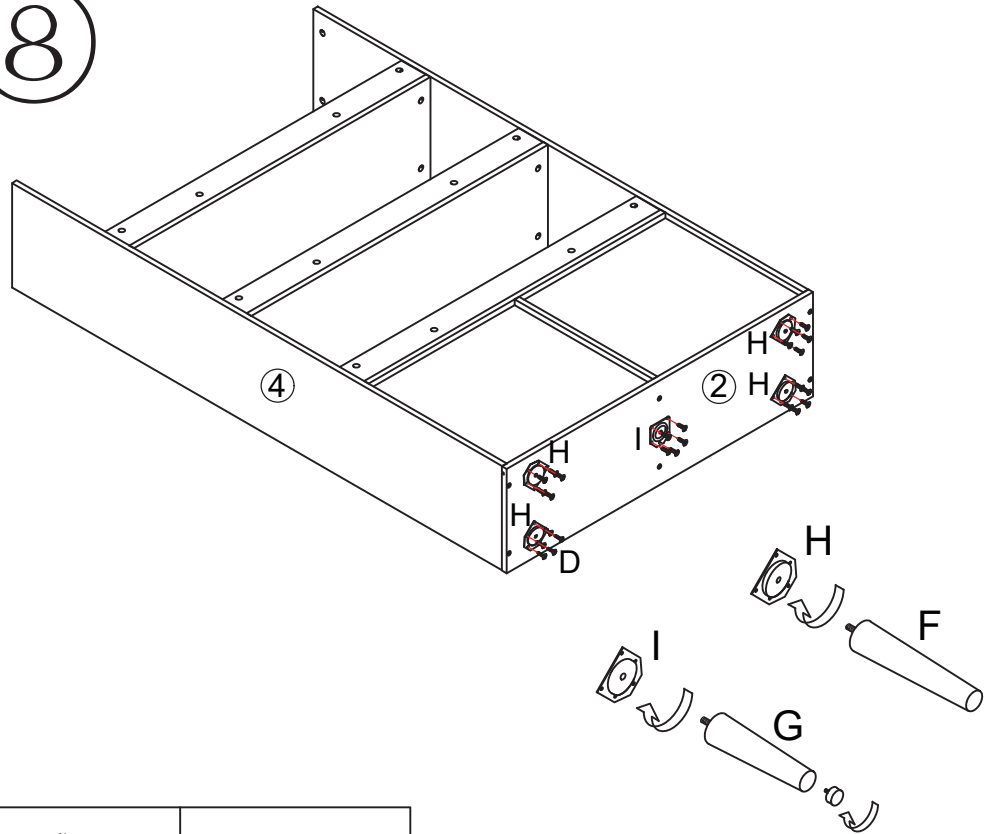

	D*25		
	F*4		H*4
	G*1		I*1


9

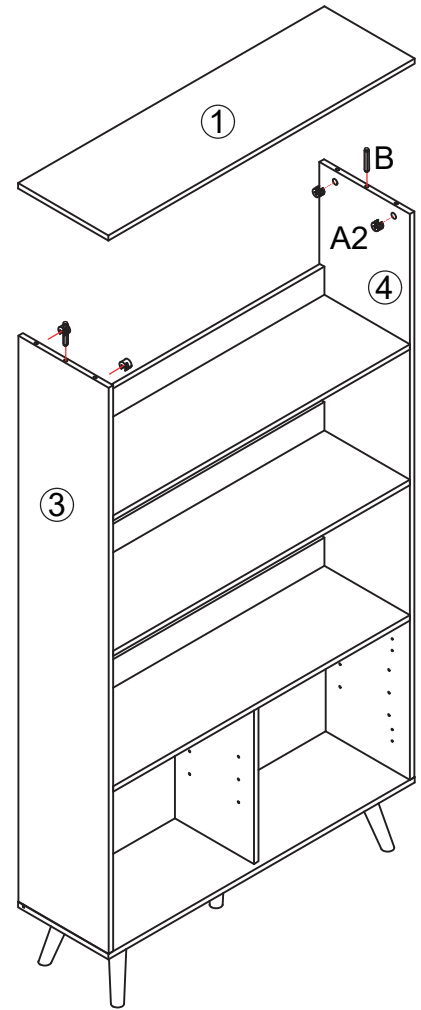

	A2*4		
	B*2		


Assembly Instructions

10

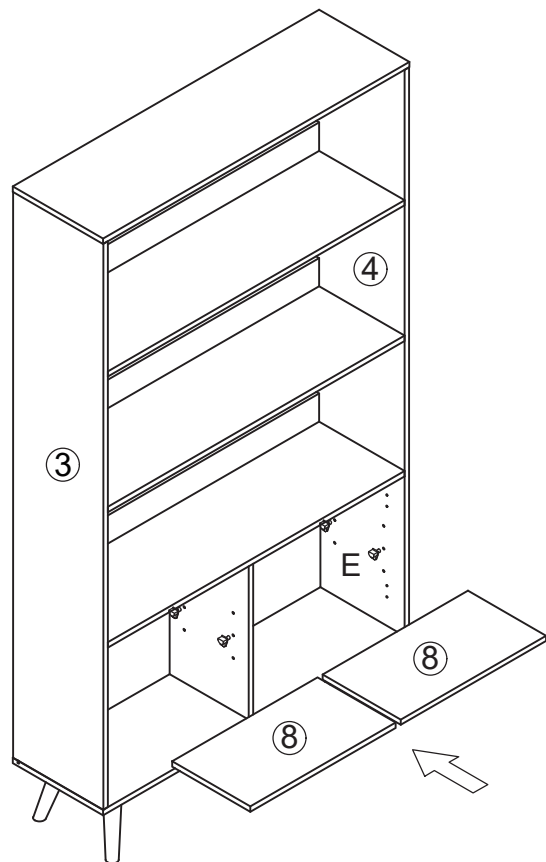

E*8

11

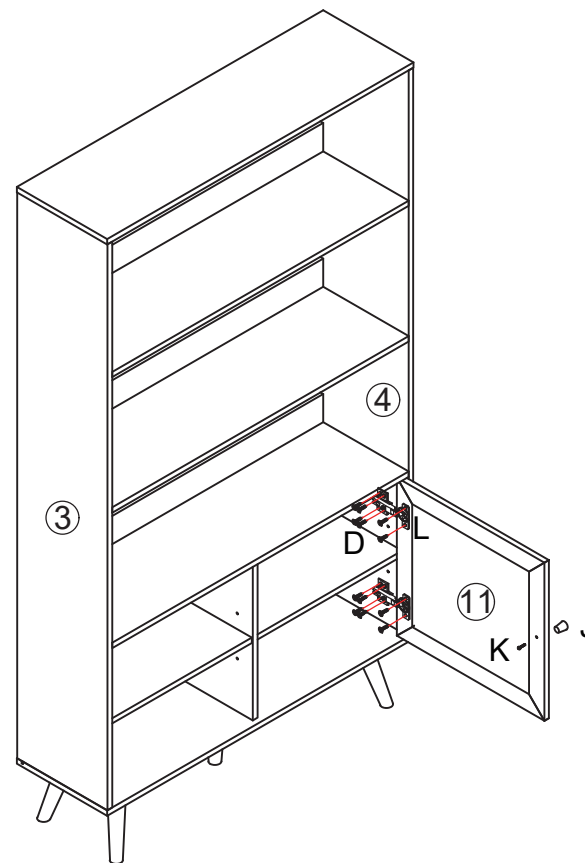

D*12



J*1




L*2




K*1


Assembly Instructions

12

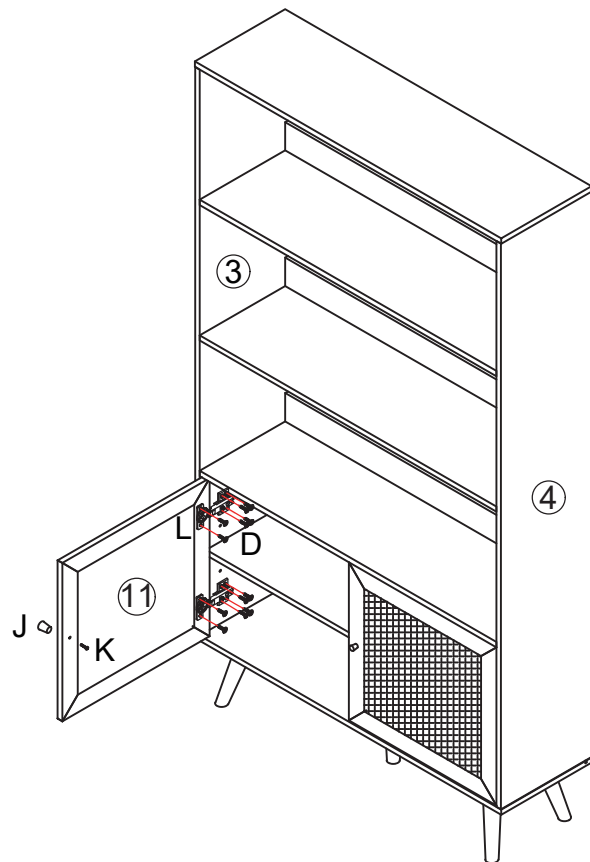

13





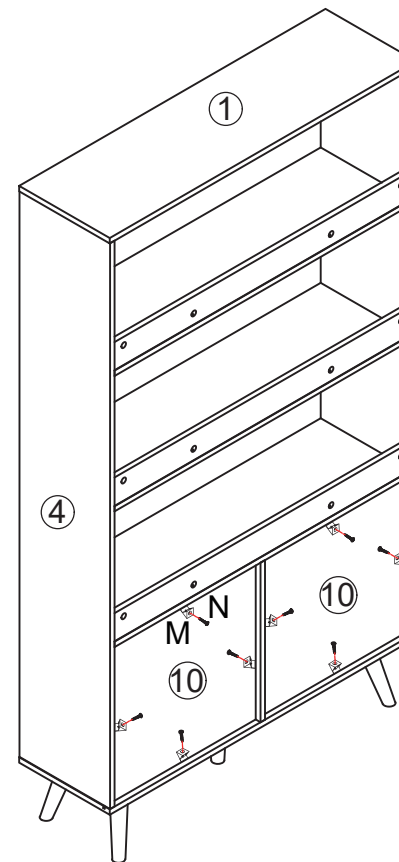


	D*12		J*1
	L*2		K*1

	M*8
	N*8

Assembly Instructions

14

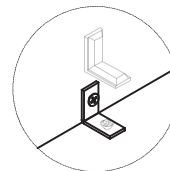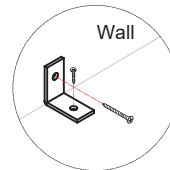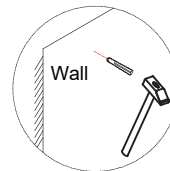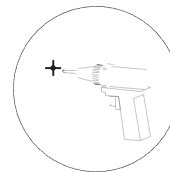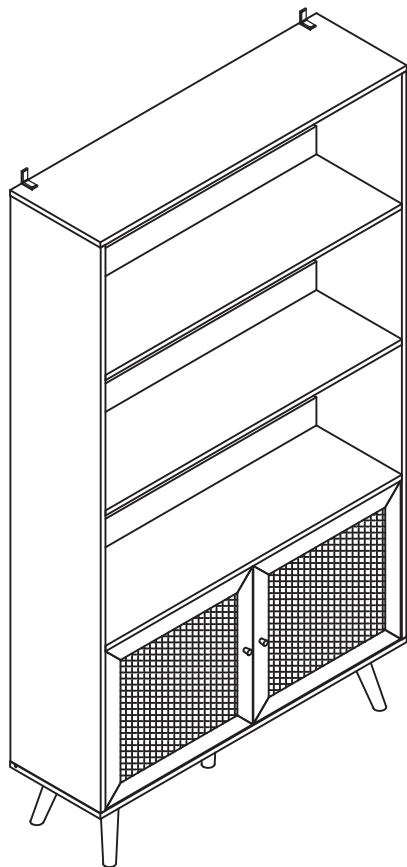

0*2

Please install tip-proof fitting.

Assembly Instructions