

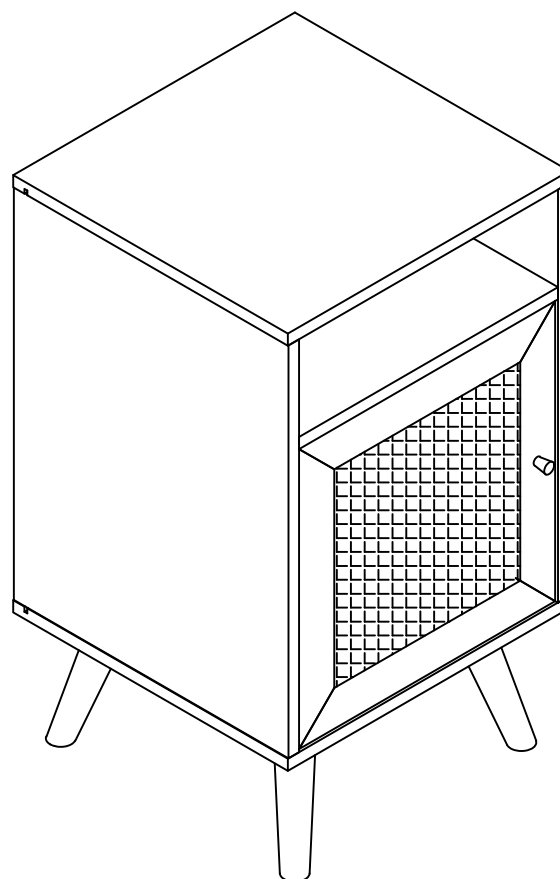
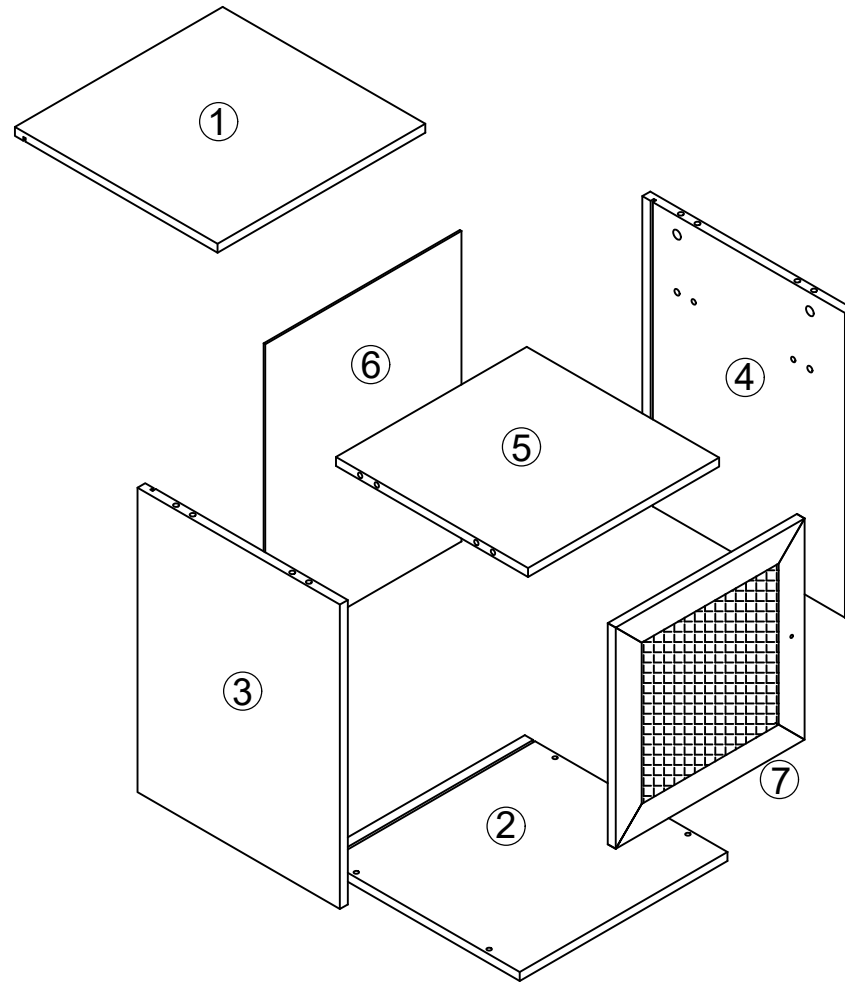
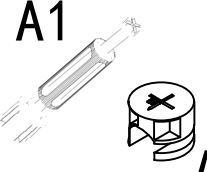
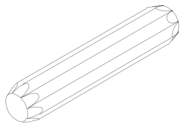
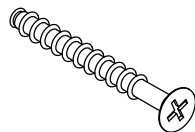


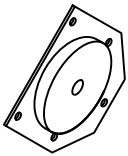


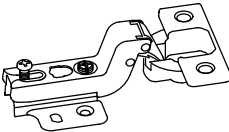

Assembly Instructions




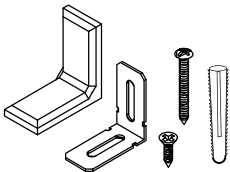


Assembly Instructions

A  A1 A2 8PCS	B 8*40  8PCS	C 7*50  4PCS	D 3.5*14  34PCS	E  1PCS
F 160mm  4PCS	G  4PCS	H  2PCS	I  1PCS	J 4*20  1PCS
K  6PCS	L 3*12  6PCS	M  1PCS		

Assembly Instructions

1

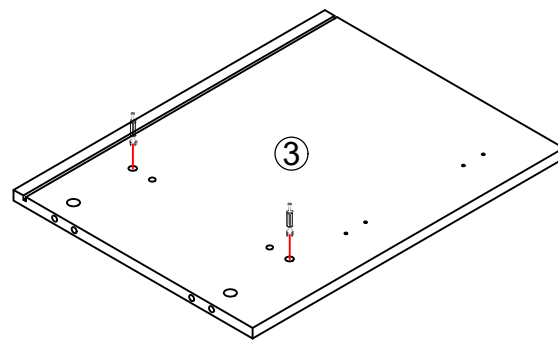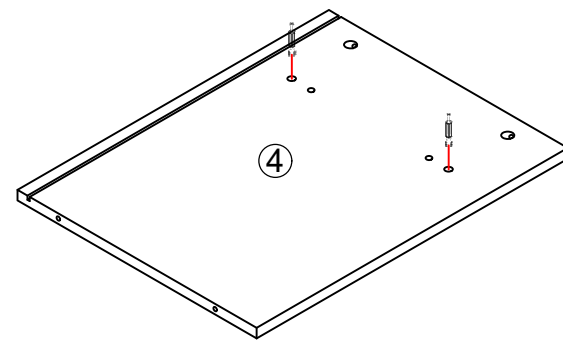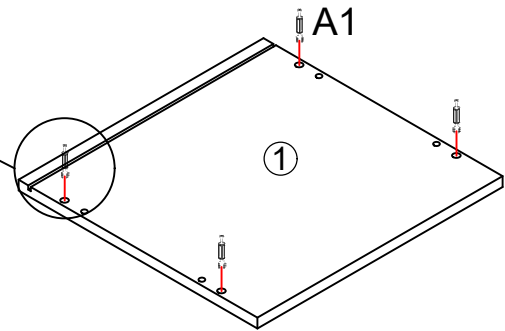
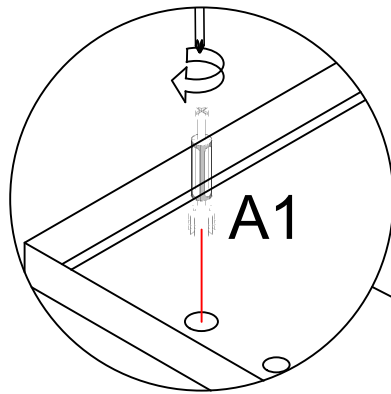


A1*8


Assembly Instructions

2

Make sure the arrow on the screw align to the hole on the side.

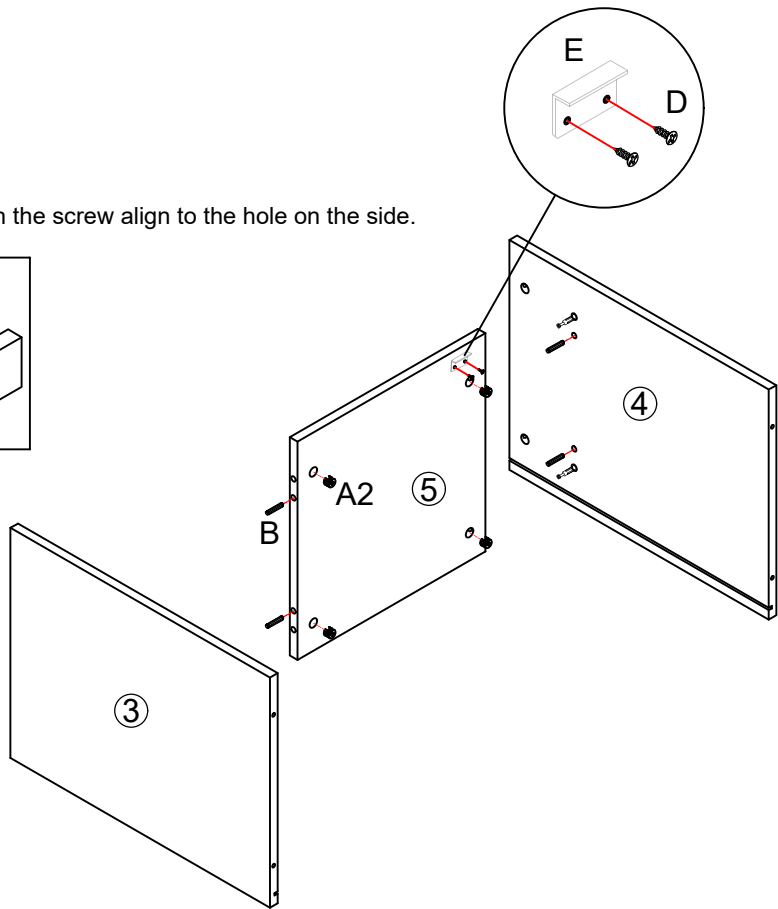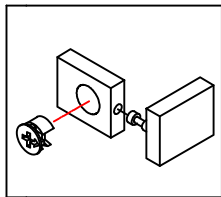

3


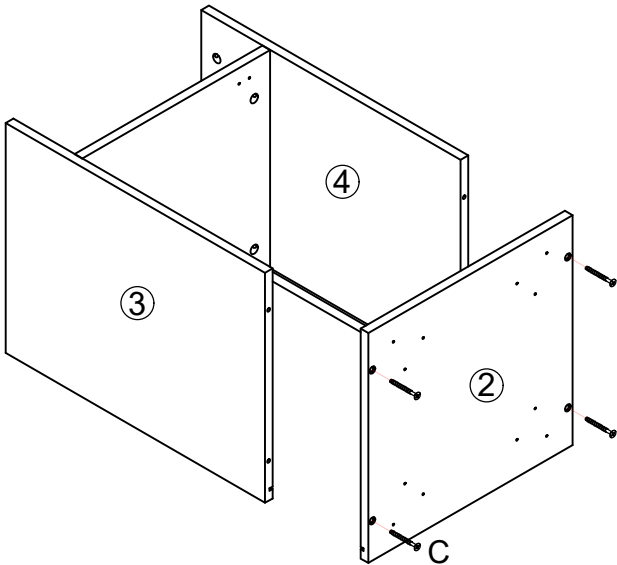


	A2*4		D*2
	B*4		E*1

	C*4
---	-----


Assembly Instructions

④

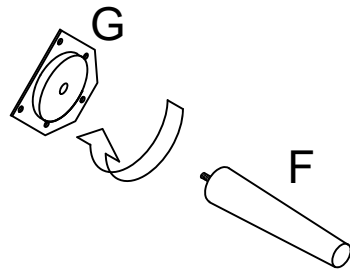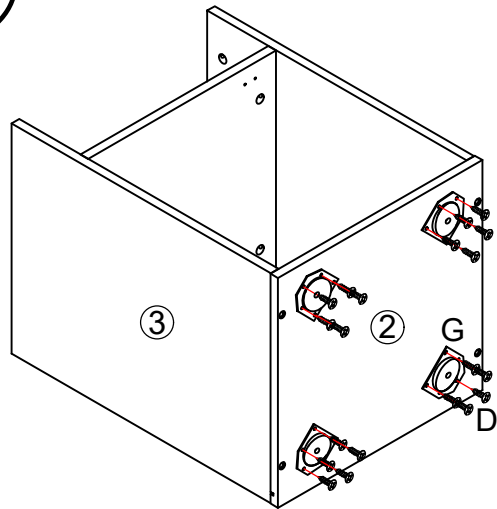


	D*20
	F*4
	G*4

⑤

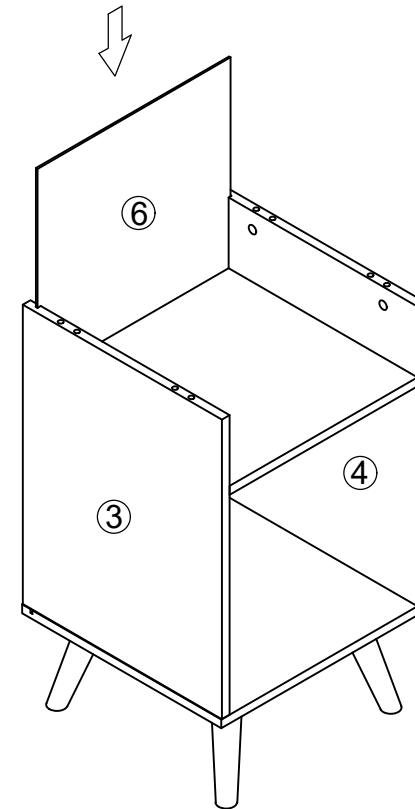


Assembly Instructions

6

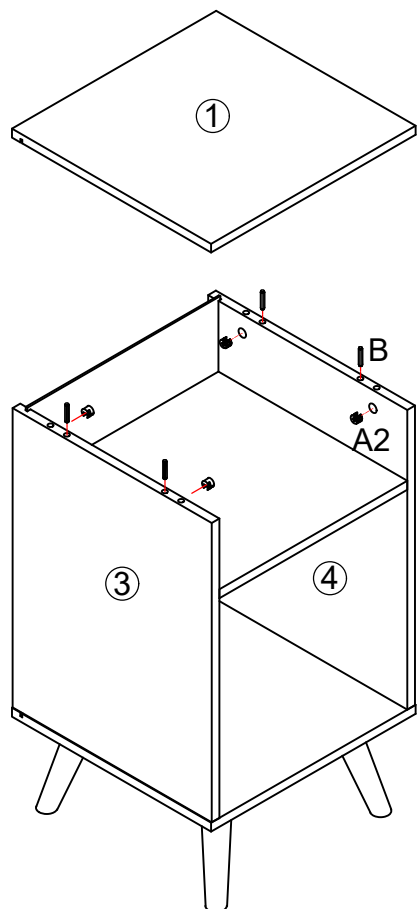

	A2*4
	B*4


7

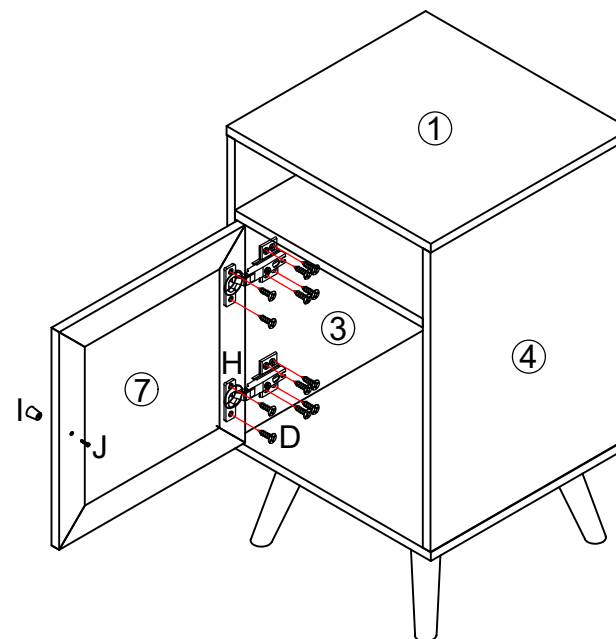

	D*12		I*1
	H*2		J*1


Assembly Instructions


8




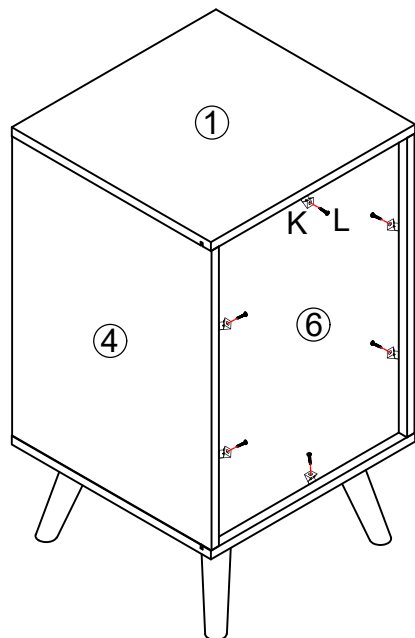


	K*6
	L*6

9

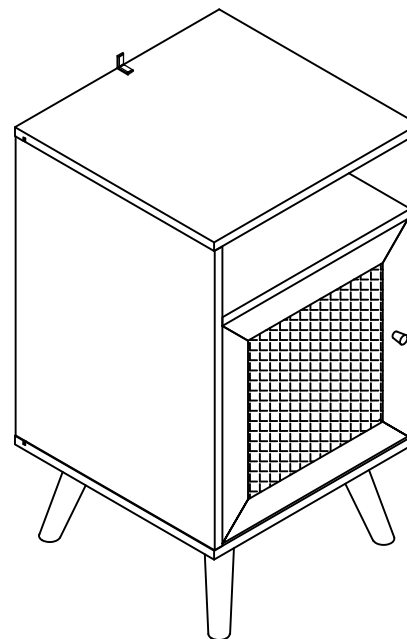

	M*1
---	-----

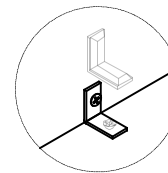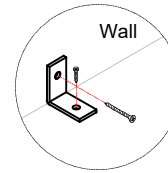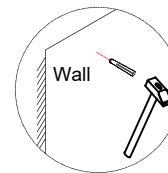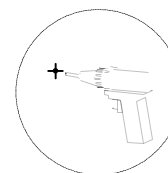

Please install tip-proof fitting.

Assembly Instructions