

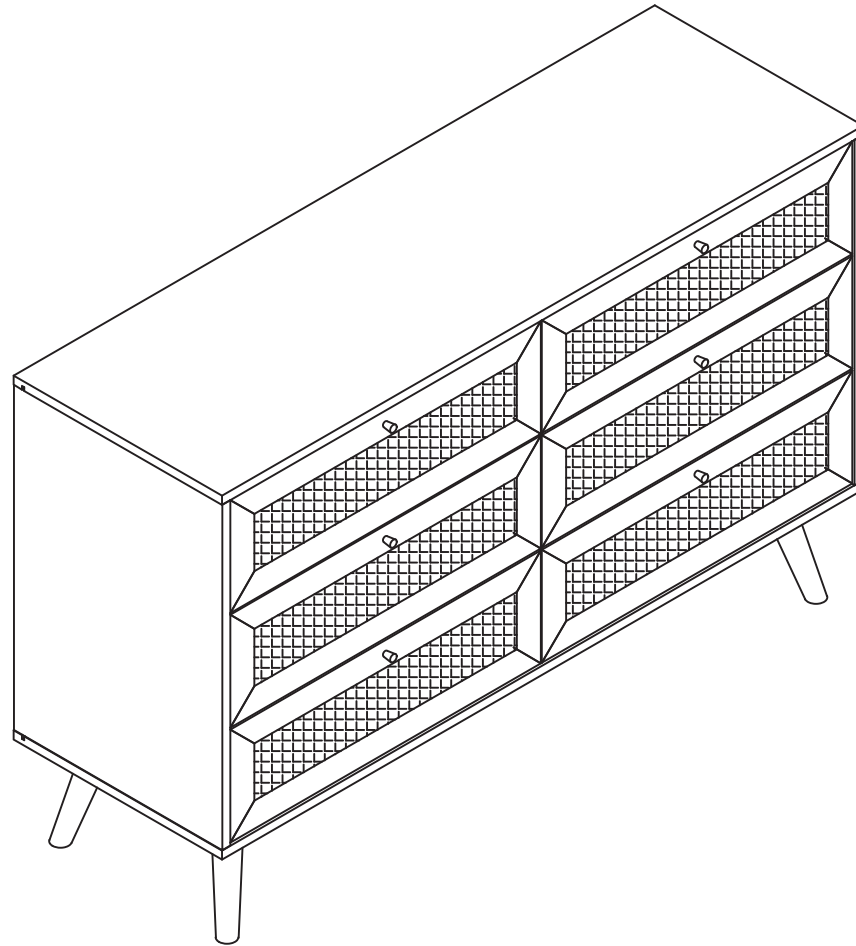
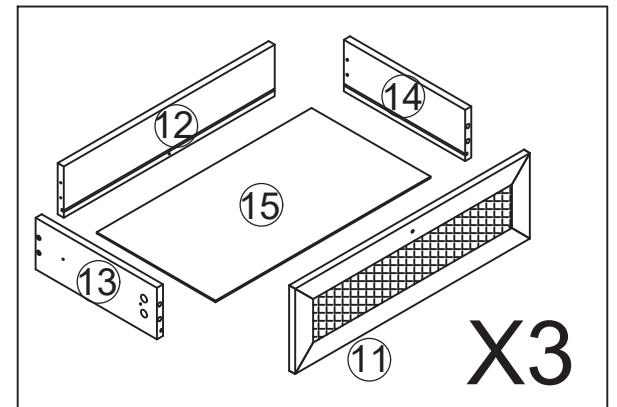
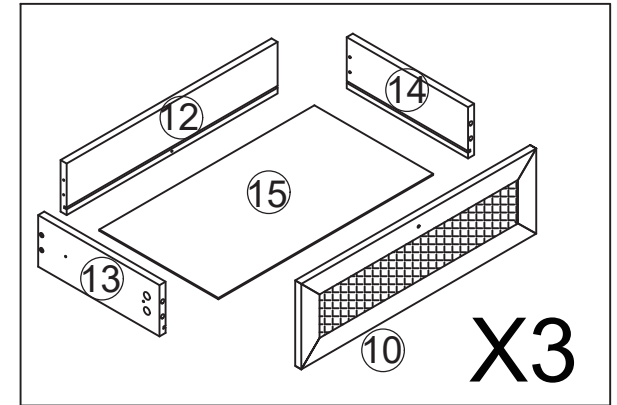
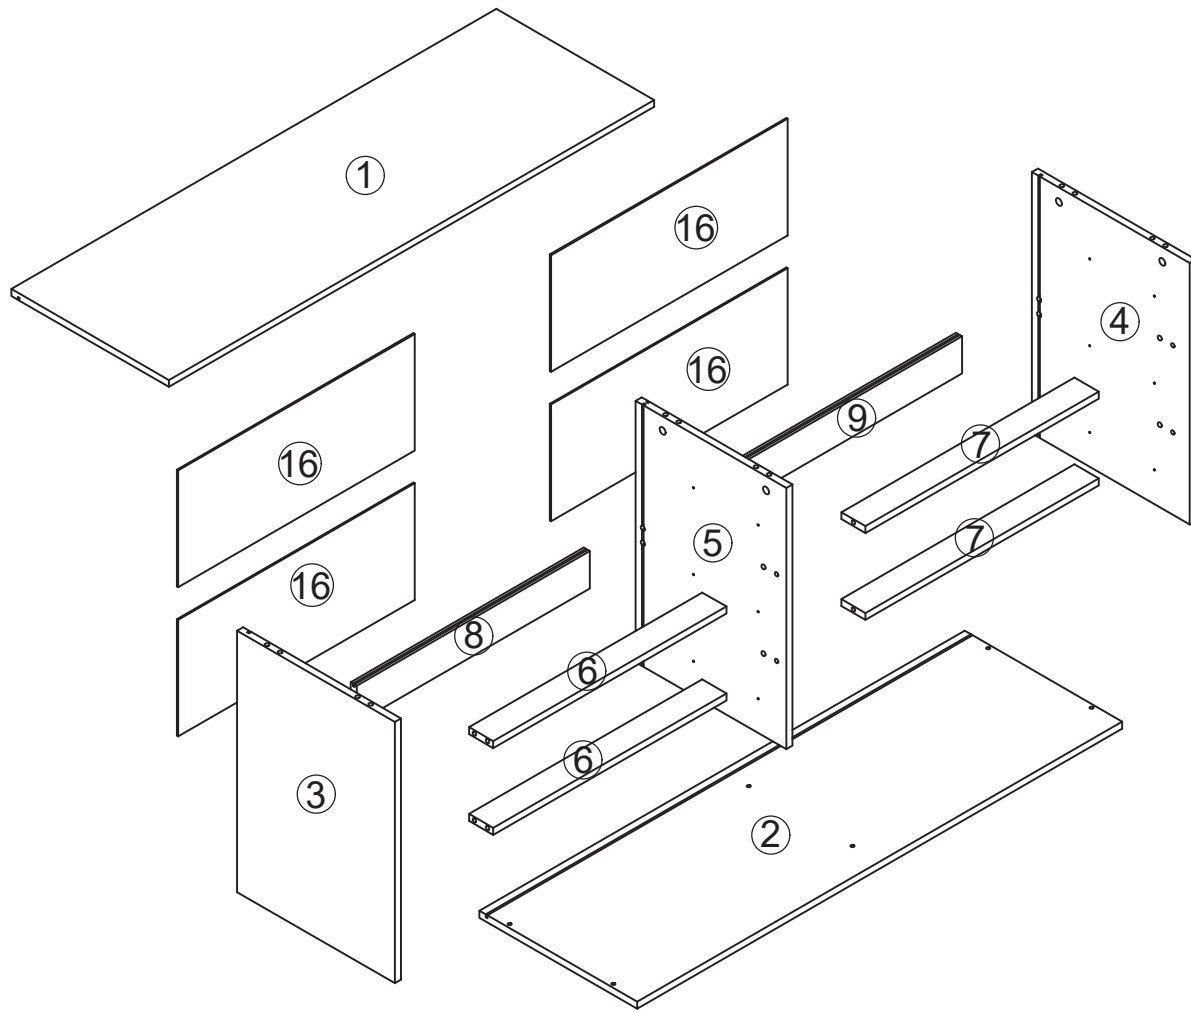
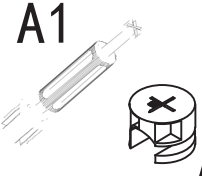
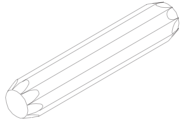
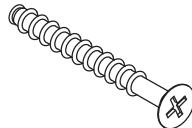

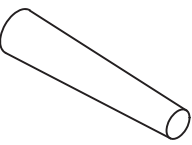
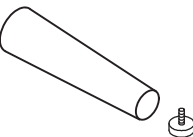
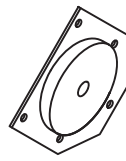
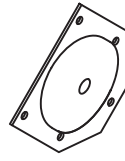
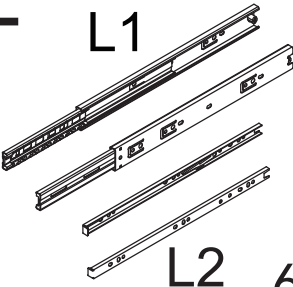





Assembly Instructions

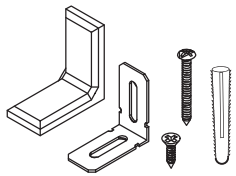


Assembly Instructions

A  45PCS	B 8*40  12PCS	C 7*50  6PCS	D 3.5*14  85PCS	E 3.5*35  24PCS
F 170mm  4PCS	G 165mm  1PCS	H  4PCS	I  1PCS	J  6PCS
K 4*20  6PCS	L 300mm  6PCS	M 284mm  6PCS	N  16PCS	O  2PCS

Assembly Instructions

1

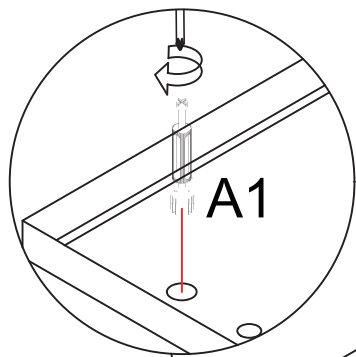

A1

1

4

10

X3

11

X3

3

5

5


180°







A1*45

Assembly Instructions

2

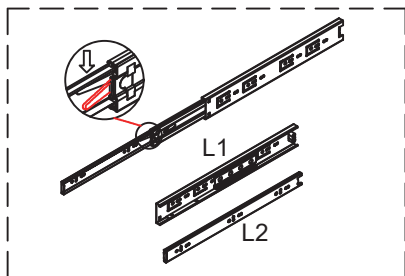

The guide rail is undivided into left and right sides.

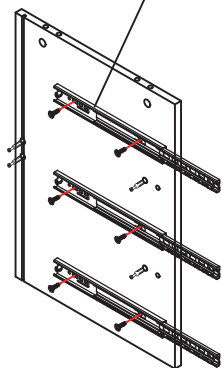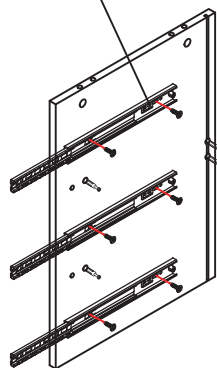
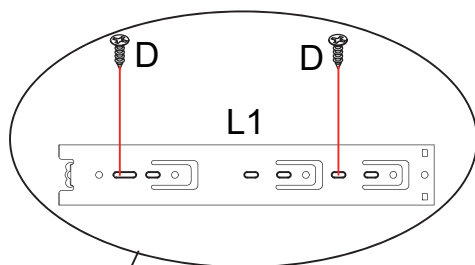
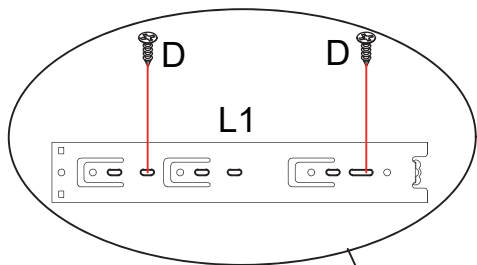


D*12




L1*3

3

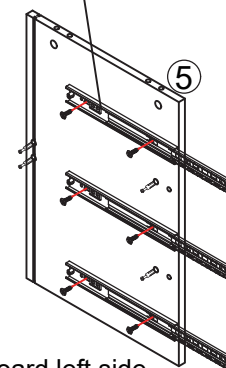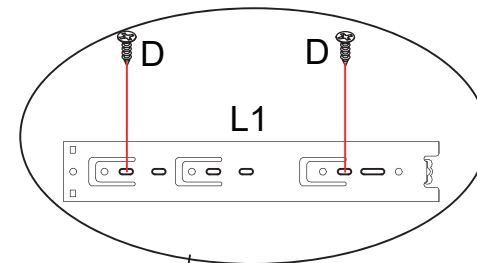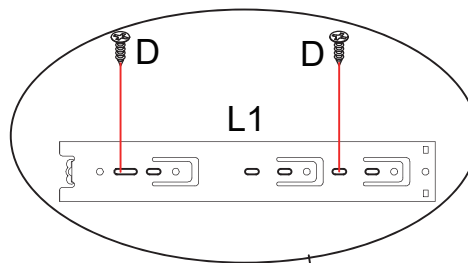

⑤ board left side

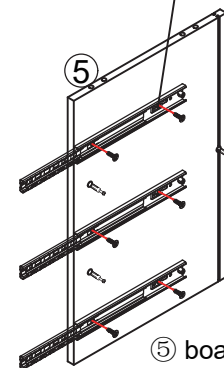

⑤ board right side



D*12





L1*3



Assembly Instructions

4

Make sure the arrow on the screw align to the hole on the side.

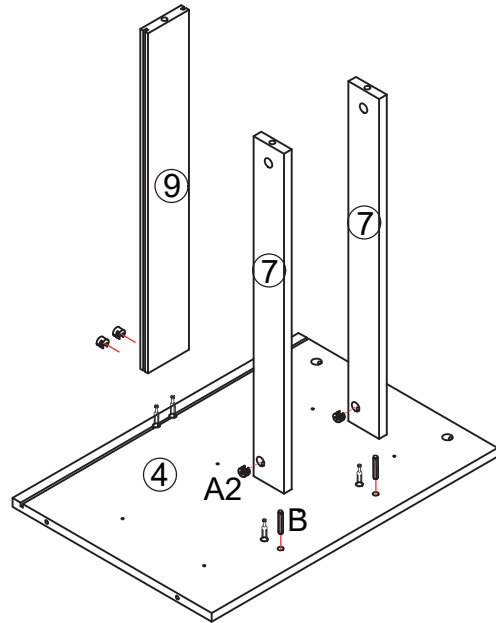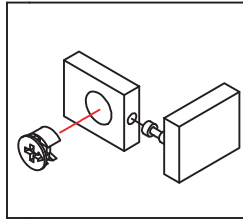

5

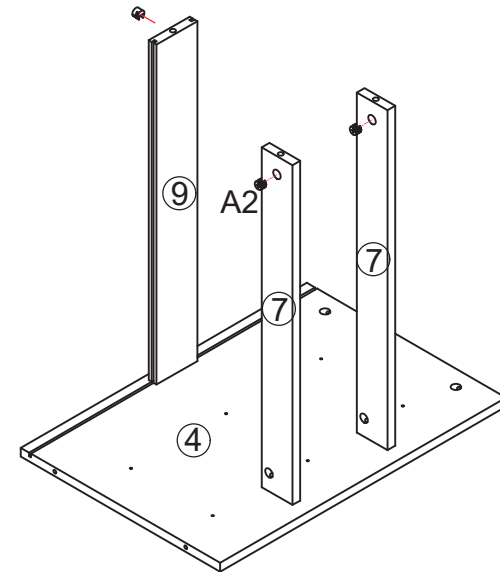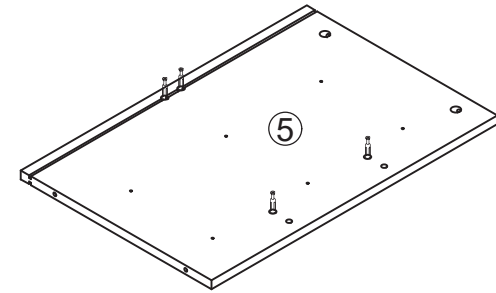

A2*4




B*2




A2*3

Assembly Instructions

6

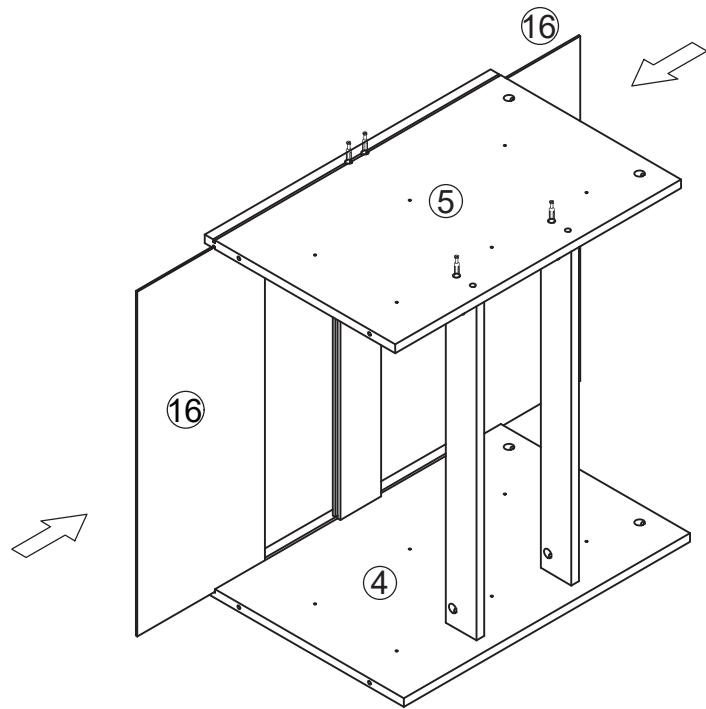

7

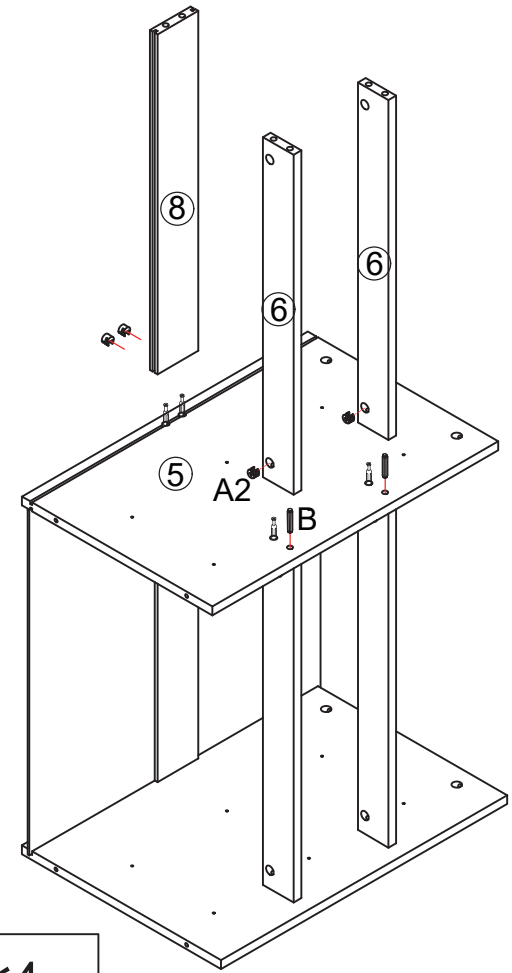


A2*4




B*2

Assembly Instructions

8

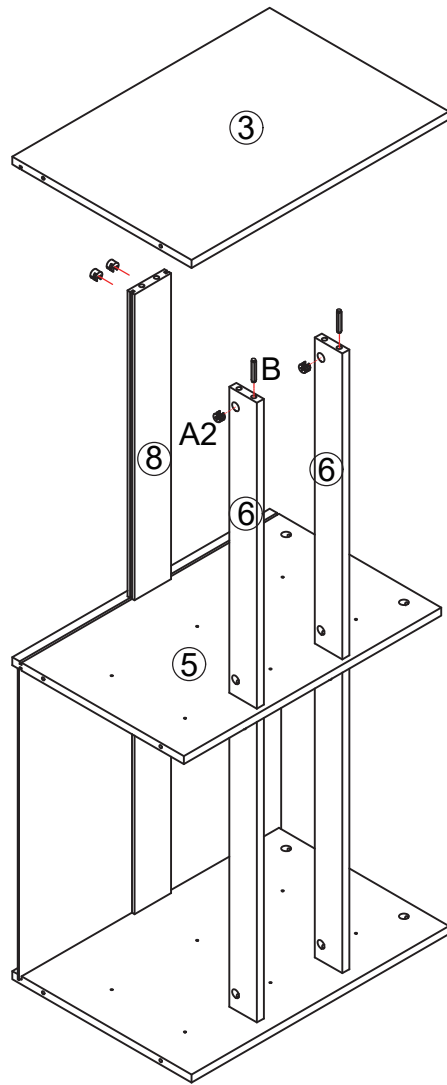

9

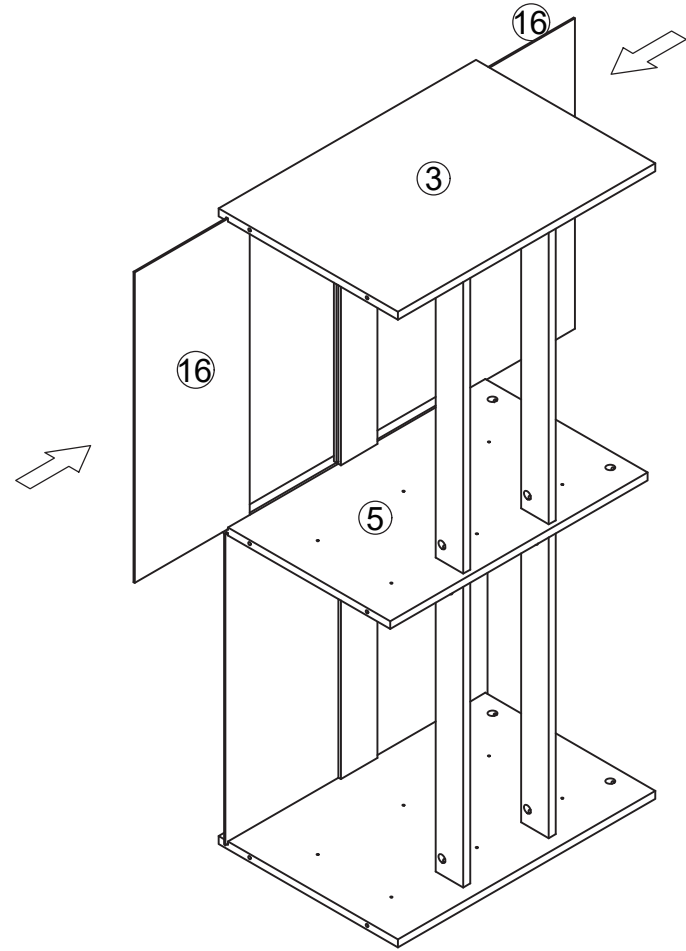


A2*4



B*2


Assembly Instructions



10

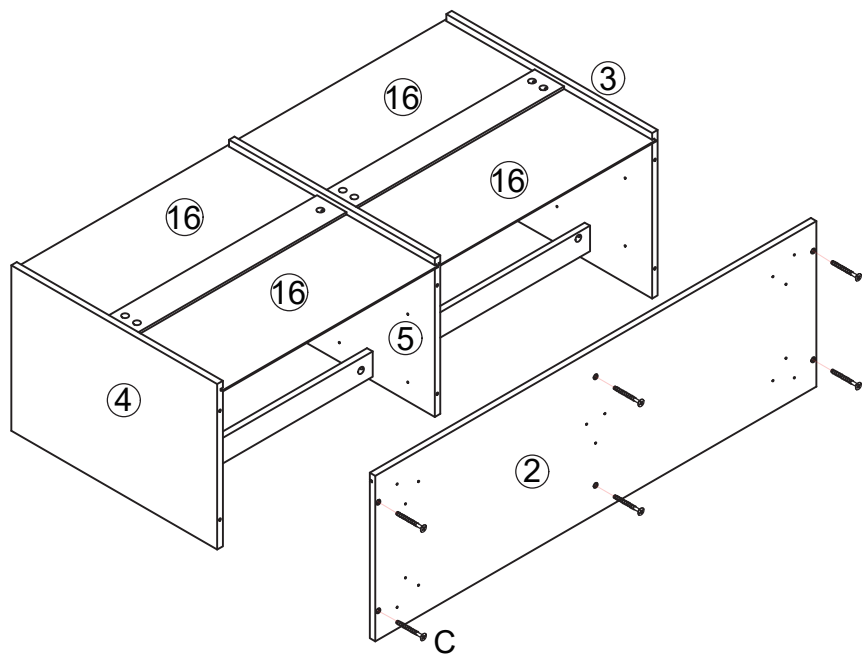

	C*6
--	-----


11

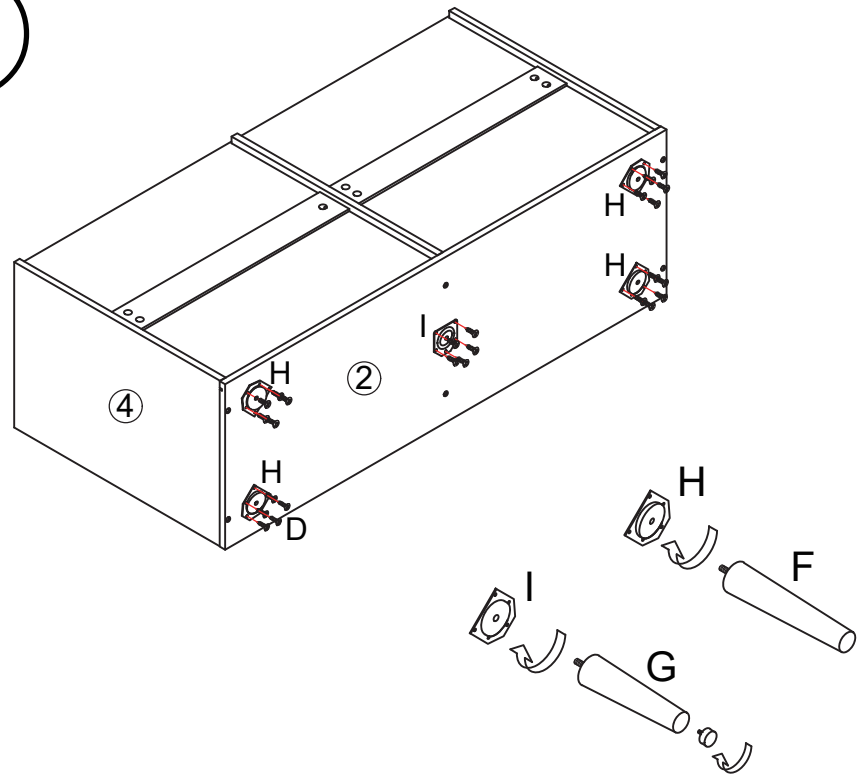

	D*25		
	F*4		H*4
	G*1		I*1

Assembly Instructions

12

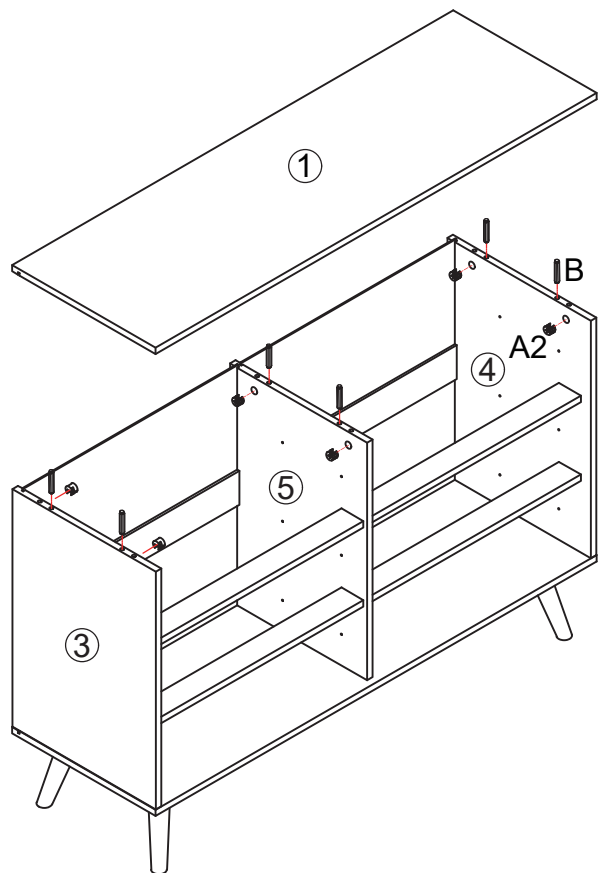


A2*6




B*6

13

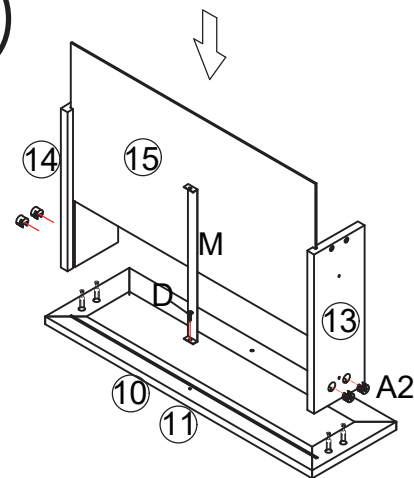

X6

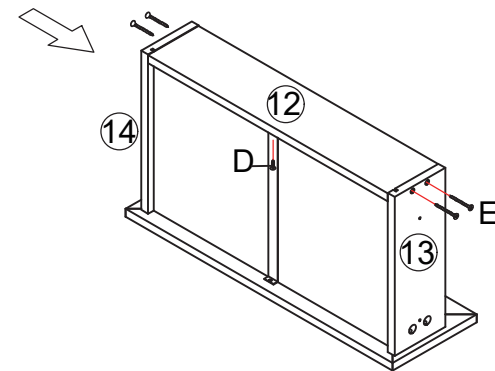


A2*24



E*24



D*12




M*6


Assembly Instructions

14

X6

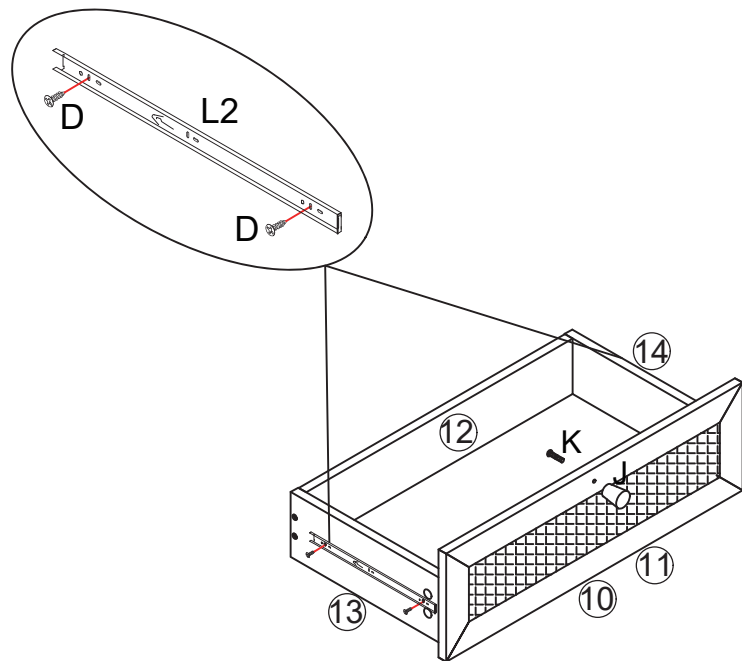

15

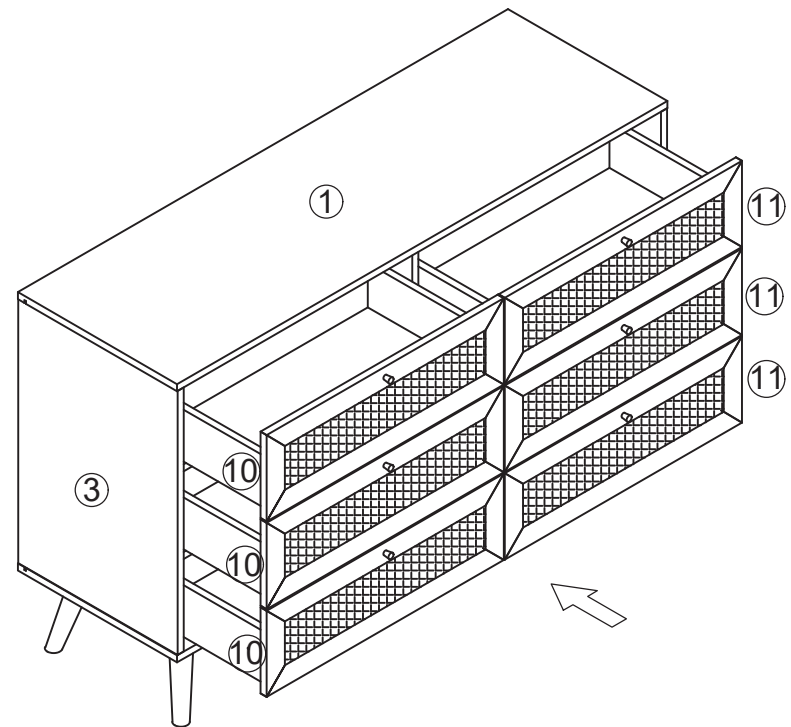

D*24



J*6




L2*6



K*6


Assembly Instructions

16




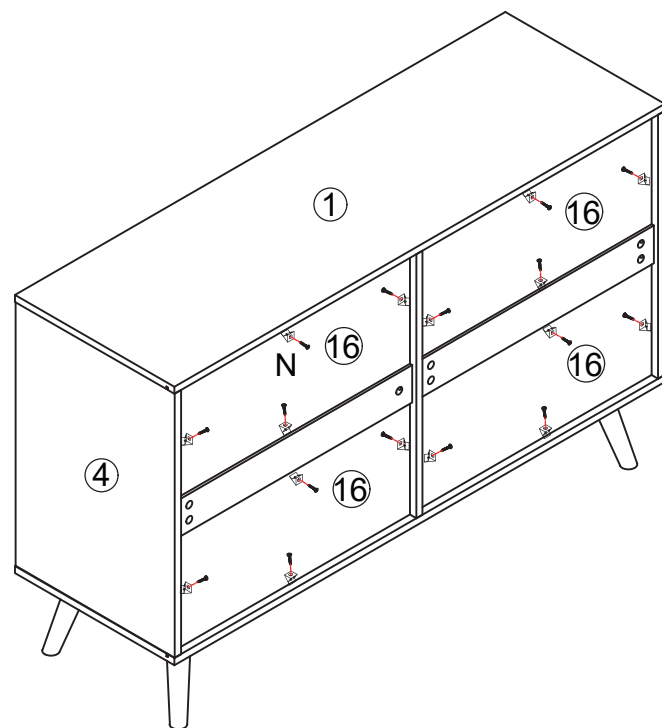


N*16

17

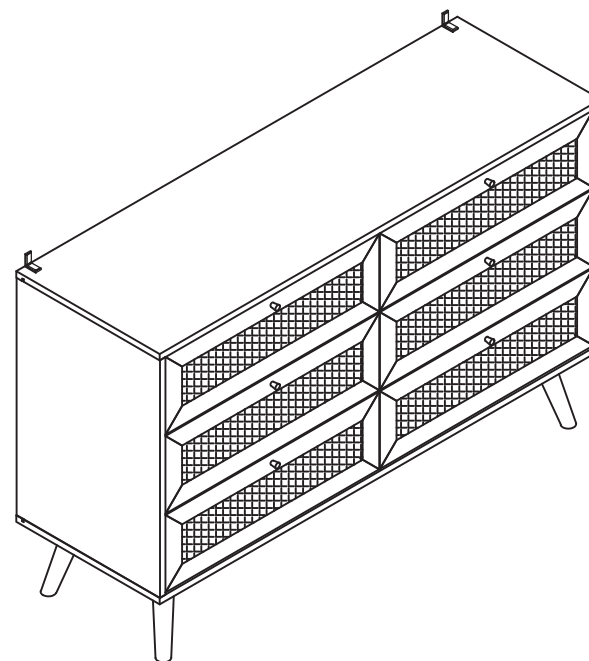

0*2

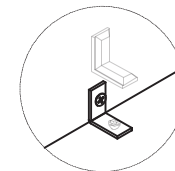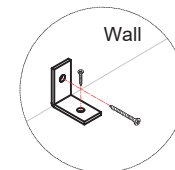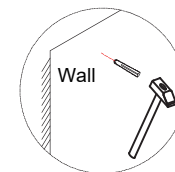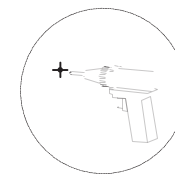

Please install tip-proof fitting.

Assembly Instructions