

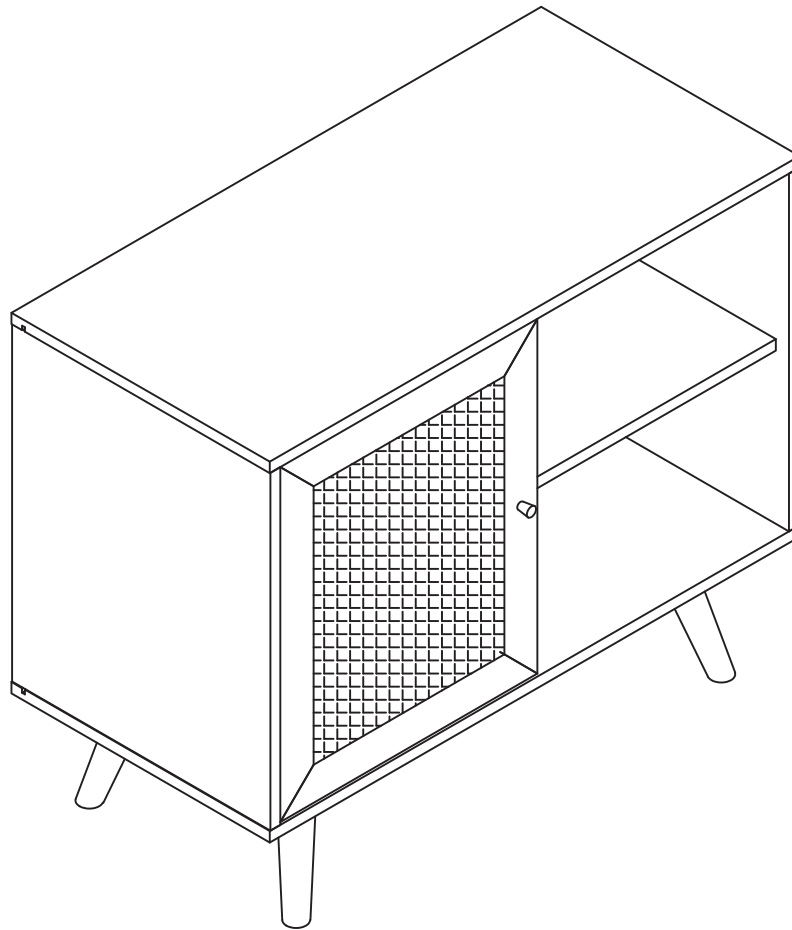
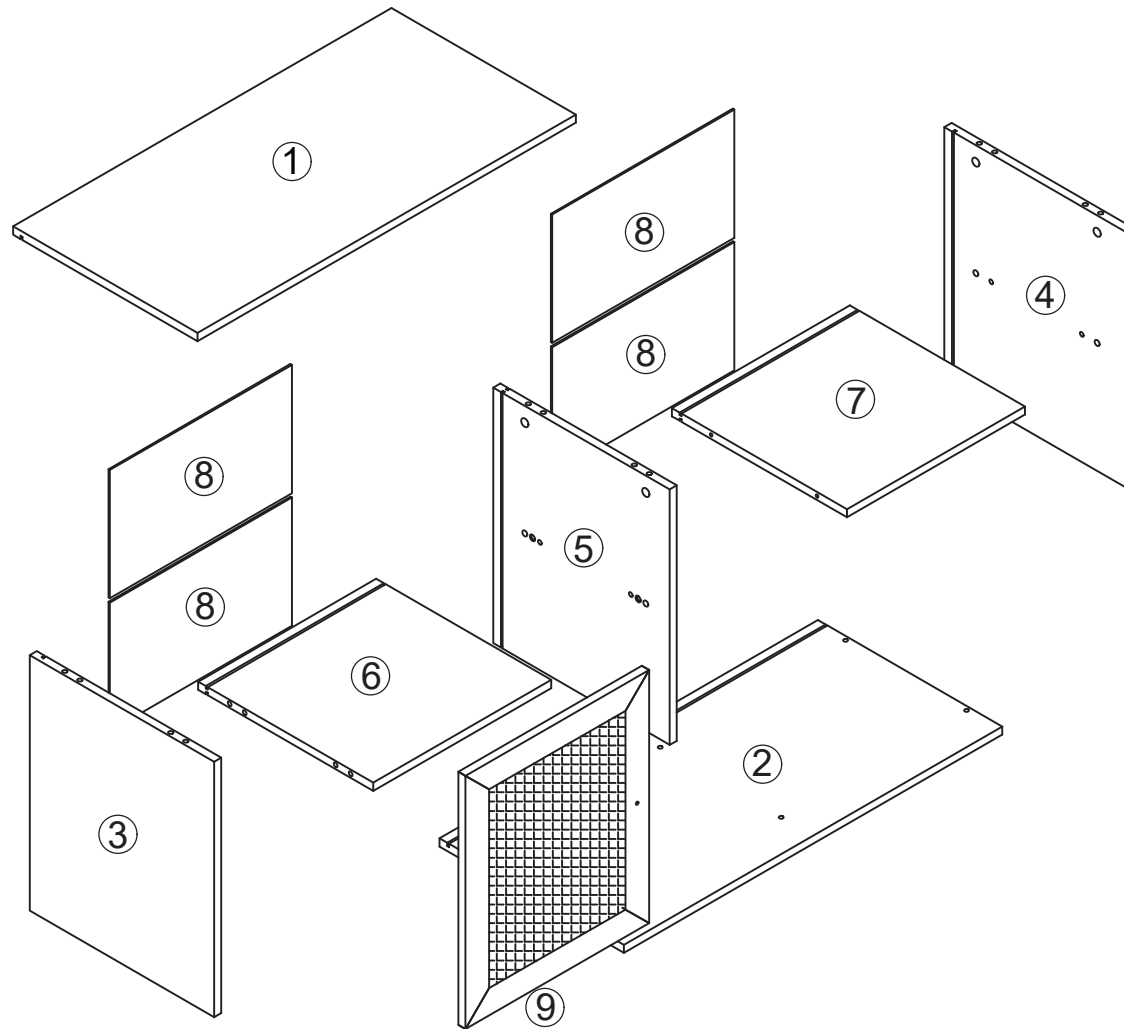
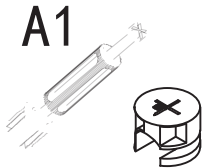
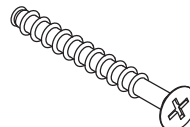

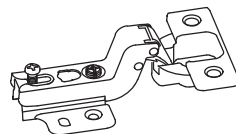
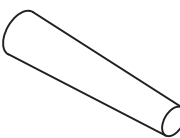


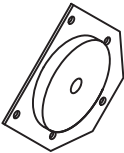

Assembly Instructions

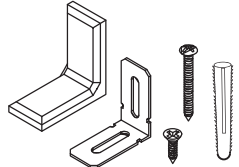


Assembly Instructions

A  A1 A2 12PCS	B 8*40  12PCS	C 7*50  8PCS	D 3.5*14  32PCS	E  2PCS
F 160mm  4PCS	G  4PCS	H  1PCS	I 4*20  1PCS	J  8PCS
K 3*12  8PCS	L  2PCS			

Assembly Instructions

1


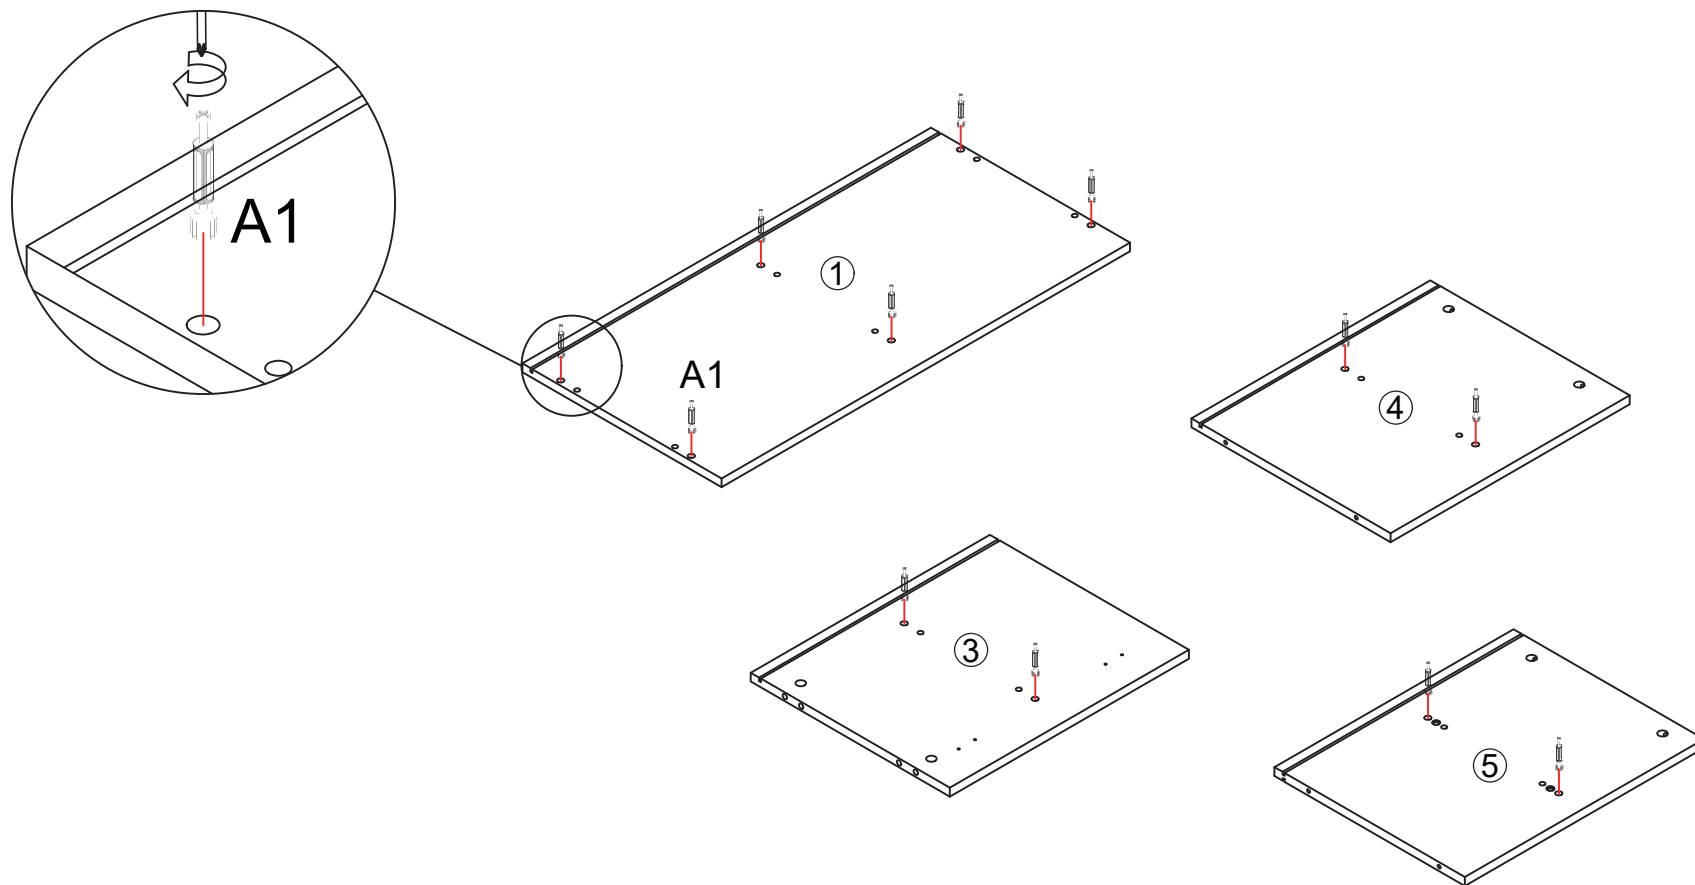


A1*12


Assembly Instructions

2

Make sure the arrow on the screw align to the hole on the side.

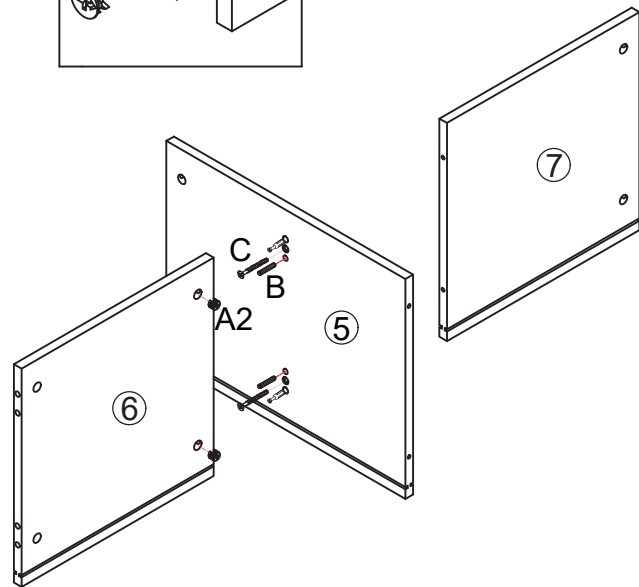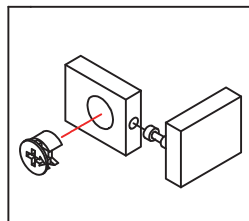


3

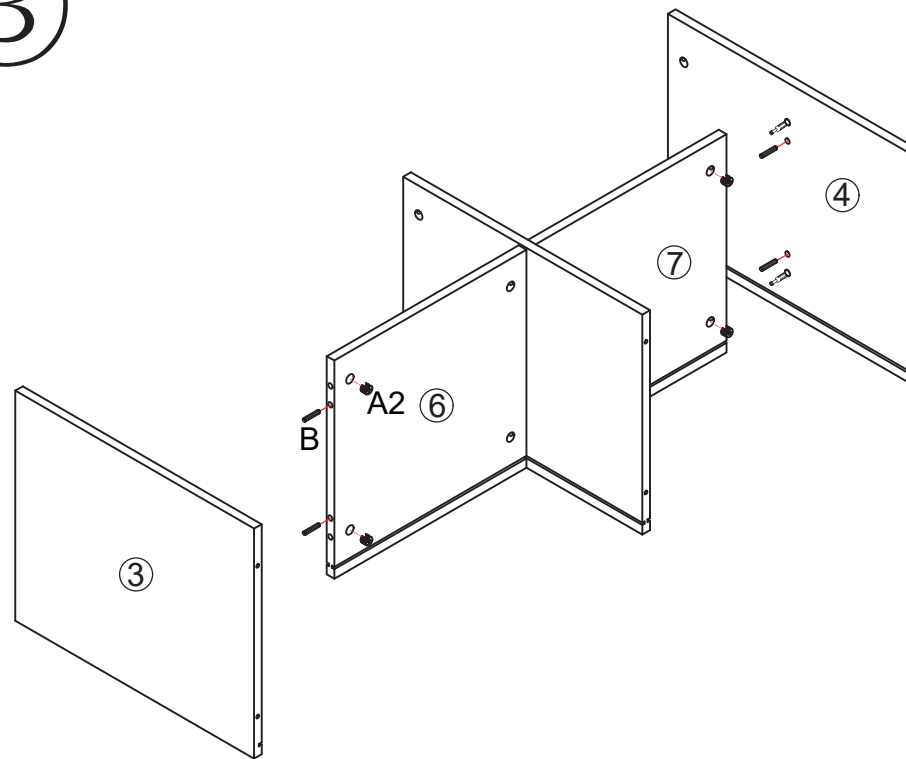

A2*2




B*2



C*2




A2*4




B*4

Assembly Instructions

④

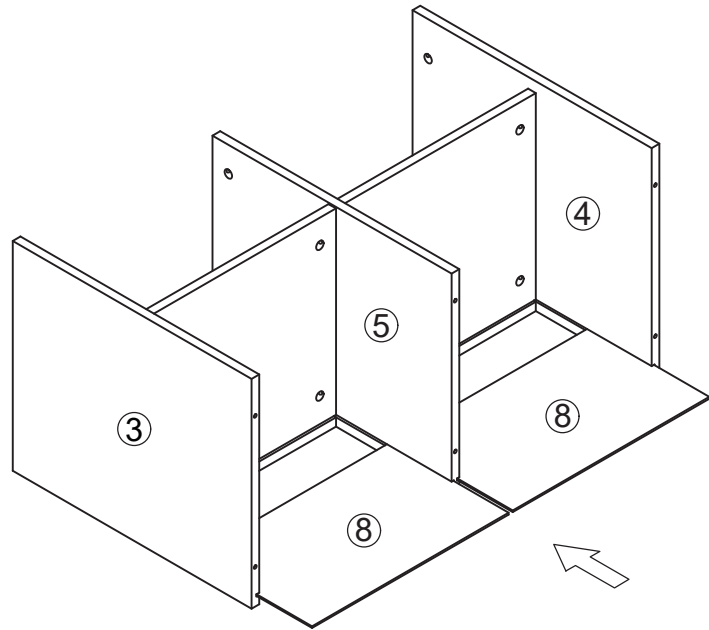


⑤

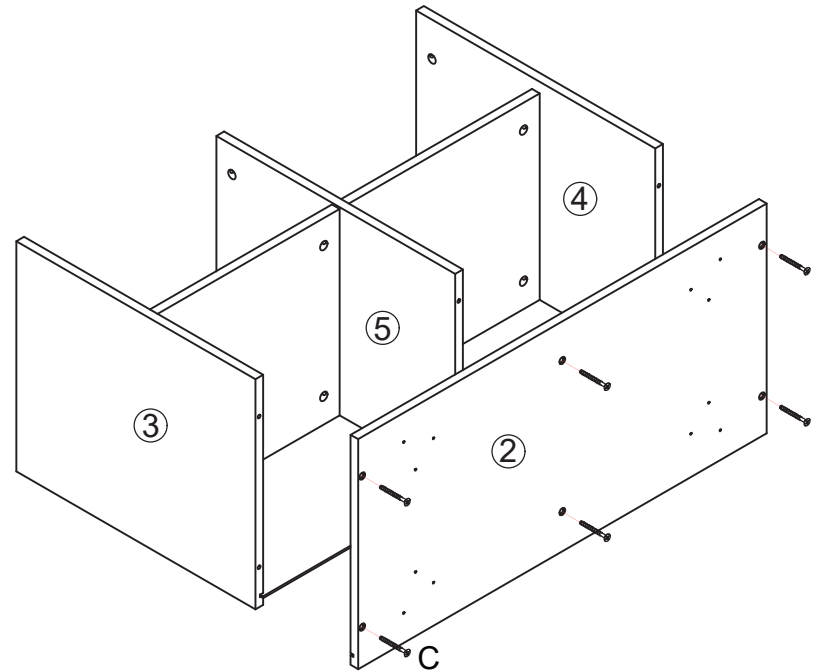

C*6


Assembly Instructions

⑥

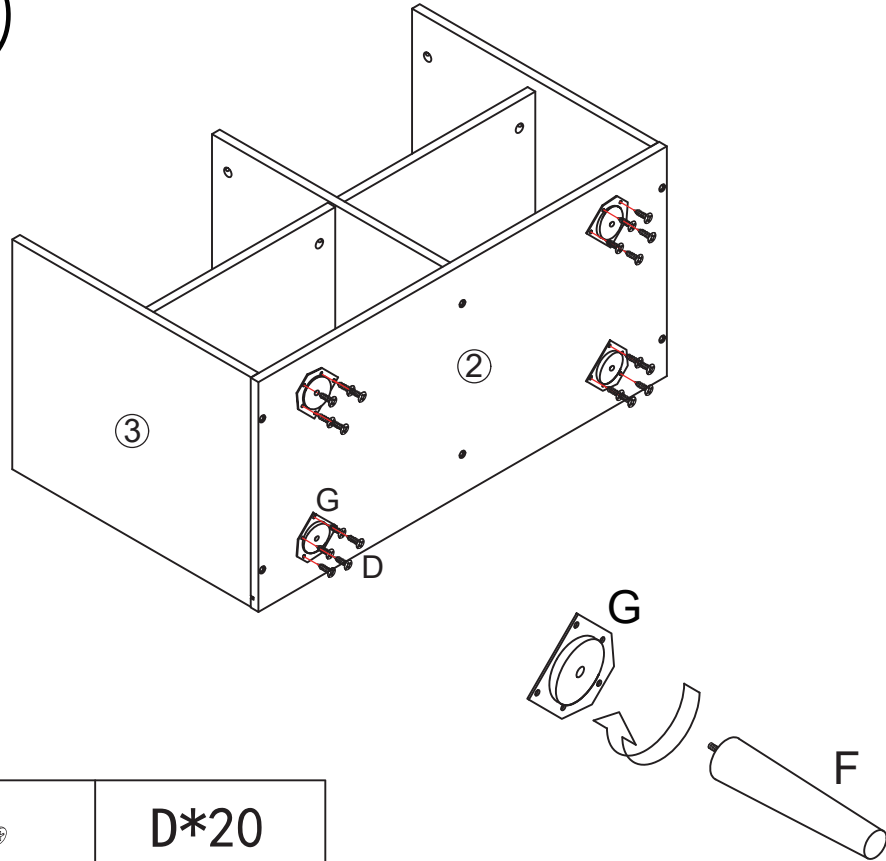


	D*20
	F*4
	G*4

⑦

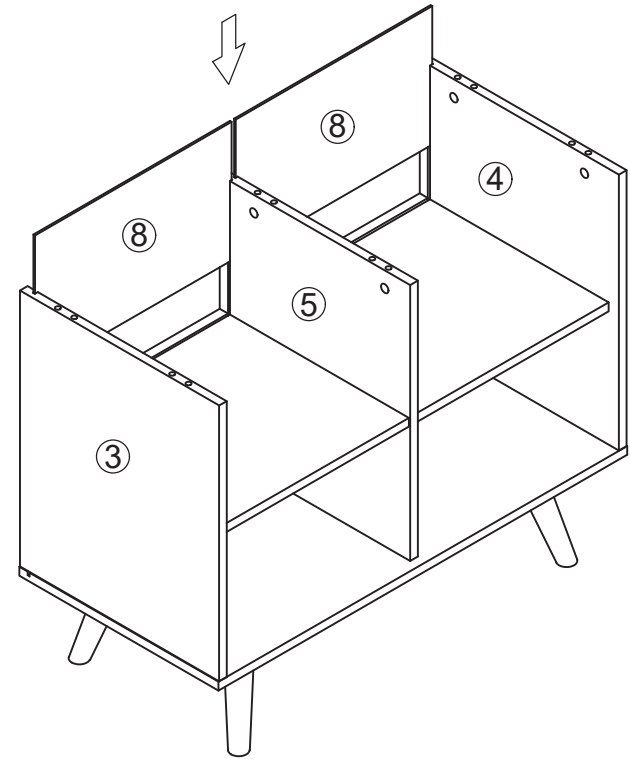


Assembly Instructions

8

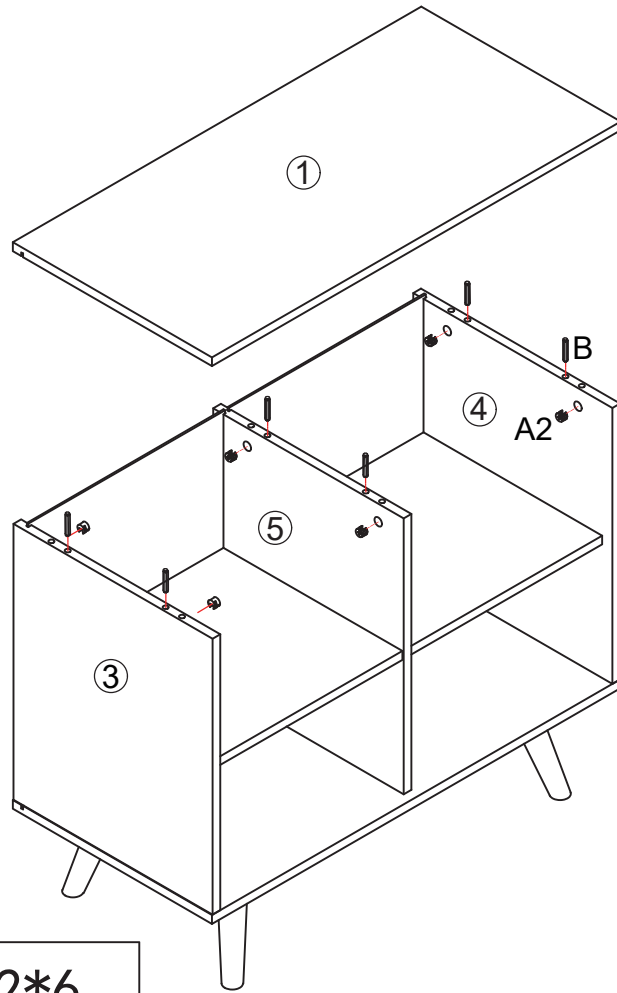

	A2*6
	B*6


9

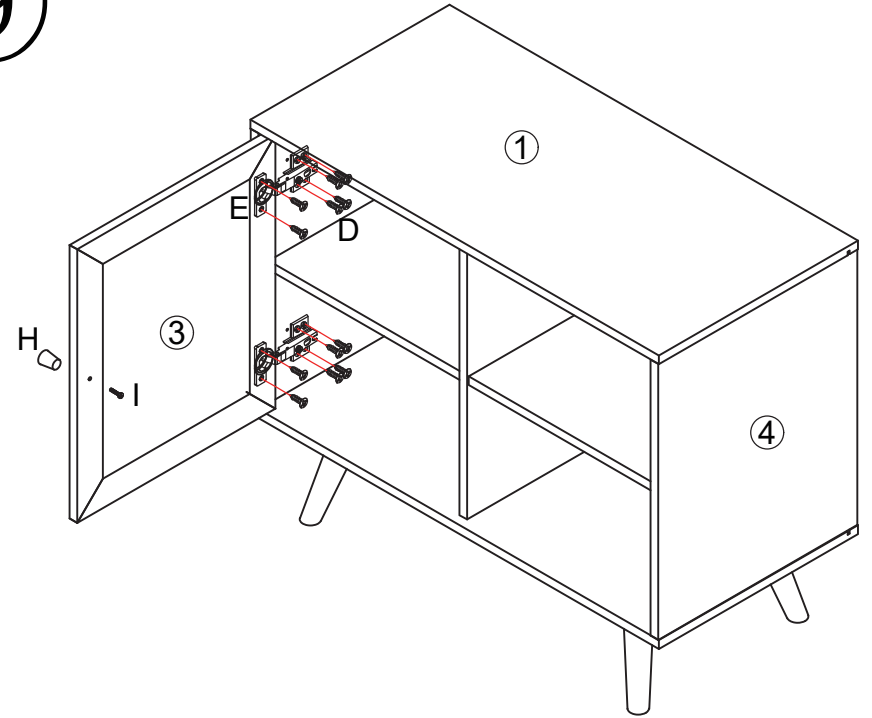

	D*12		H*1
	E*2		I*1

Assembly Instructions

10

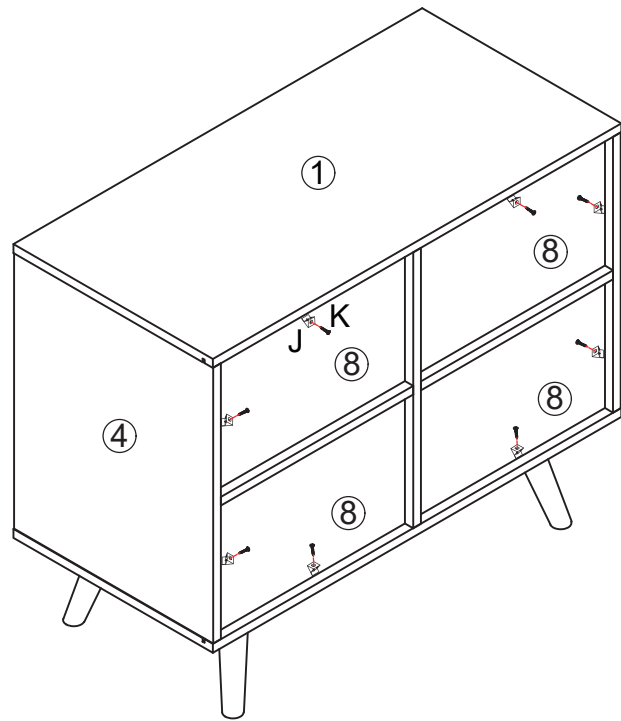


J*8







K*8

11

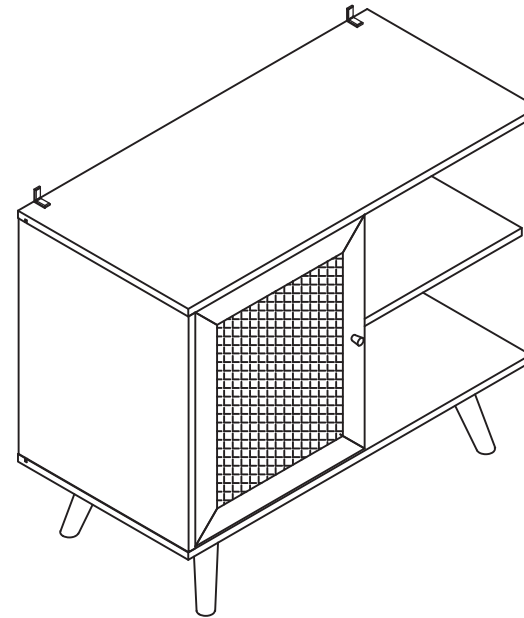

L*2

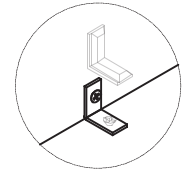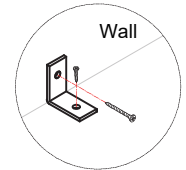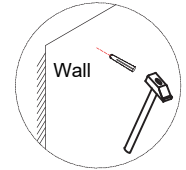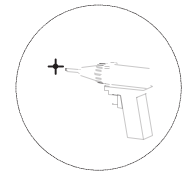

Please install tip-proof fitting.

Assembly Instructions